





Fronius Datalogger Web

 Operating Instructions
 System monitoring



POWERING YOUR FUTURE

Dear reader,



Introduction

Thank you for the trust you have placed in our company and congratulations on buying this high-quality Fronius product. These instructions will help you familiarize yourself with the product. Reading the instructions carefully will enable you to learn about the many different features it has to offer. This will allow you to make full use of its advantages.

Please also note the safety rules to ensure greater safety when using the product. Careful handling of the product will repay you with years of safe and reliable operation. These are essential prerequisites for excellent results.

Contents



Dear reader	1
Introduction	1
General	5
General	5
Applicable DATCOM components	5
Prerequisites for operation	5
Required Inverter Software	5
Scope of supply	6
Controls, connections and indicators	7
Safety	7
Controls, connections and indicators	7
Installing Fronius Datalogger Web	9
Safety	9
Configuration examples	9
Preparation	10
Installing 'Fronius Datalogger Web'	10
Fronius Datalogger Web network configuration	11
General	11
Requirements	11
'Fronius Datalogger Web' network configuration	11
Installing 'Fronius Datalogger Web' and going to the 'Fronius Datalogger Web' homepage	12
Entering network data	13
Setting 'Fronius Datalogger Web' for the WLAN connection	15
Setting the IP address and connecting 'Fronius Datalogger Web' to the network	18
Network settings for PC/laptop	19
General	19
Network settings for PC/laptop	19
Internet options for PC/laptop	21
Connecting to 'Fronius Datalogger Web' via Internet browser	23
General	23
Requirements	23
Connecting to 'Fronius Datalogger Web' via Internet browser	23
For the network administrator	24
Connecting to 'Fronius Datalogger Web' via 'Fronius Solar.access'	25
General	25
Requirements	25
Connecting to 'Fronius Datalogger Web' via 'Fronius Solar.access'	25
For the network administrator	26
Connecting to 'Fronius Datalogger Web' via the Internet and 'Fronius Solar.web'	27
General	27
Function overview	27
Requirements	27
Accessing data from 'Fronius Datalogger Web' via the Internet and 'Fronius Solar.web'	28
For the network administrator	28
General information for the network administrator	29
General firewall settings	29
Sending service messages via a DSL Internet connection	29
Using 'Fronius Solar.web' and sending service messages	29
'Fronius Datalogger Web' views	30
Overview	30
Current total view	30
Current comparison view	31
'Fronius Datalogger Web' settings	32

Overview	32
Accessing and editing selection options	32
Passwords	33
General	33
Passwords	33
User password	33
Administrator Password	34
Forgot Your Password?	34
Time/Date	35
General	35
Time/Date	35
Views	37
General	37
Views	37
'General' view	37
Inverter views	38
Sensor Card views	38
Logging	39
General	39
Logging	39
Memory capacity	39
Calculating memory capacity	39
Calculation example	40
Overwriting data when memory is full	41
'Delete Data' button	41
Network	42
General	42
Network	42
Network diagnostics	43
Solar.web	44
General	44
Solar.web	44
Daily data transmission to Solar.web	44
Hourly data transmission to Solar.web	44
Service messages	45
General	45
Service messages	45
System information	48
General	48
System information	48
Firmware update	49
General	49
Automatic update search	49
Manual update search	50
Firmware update via web	50
Firmware update via LAN	51
Technical Data	53
Technical data	53

General



General

The 'Fronius Datalogger Web' is a network-compatible Datalogger. The 'Fronius Datalogger Web' website provides a quick overview of the PV system.

The website can be accessed via a direct connection from the Intranet or with the proper configuration via the Internet.

The 'Fronius Datalogger Web' is equipped with an easy-to-configure system monitoring feature with an automatic alarm. The alarm can be signaled via SMS, e-mail, fax, relay contact or buzzer.

When connected to 'Fronius Solar.access,' realtime PV system data as well as archived data can be saved to a PC and analyzed. You can also make settings to all devices in 'Fronius Solar Net.'

When connected to 'Fronius Solar.web,' realtime PV system data as well as archived data can be easily accessed via the Internet - no difficult configuration required. Data is sent automatically from 'Fronius Datalogger Web' to 'Fronius Solar.web.'

Applicable DAT-COM components

'Fronius Datalogger Web' can be used with the following DATCOM components:

- Up to 100 x 'Fronius IG Plus,' 'Fronius IG' or 'Fronius CL' inverters
- Up to 10 x 'Fronius Sensor Cards' or 'Fronius Sensor Boxes'
- Up to 10 x 'Fronius Public Display Cards' or 'Fronius Public Display Boxes'
- Up to 1 x 'Fronius Interface Card' or 'Fronius Interface Box'
- Up to 200 x 'Fronius String Controls'

Prerequisites for operation

The inverter requires a 'Fronius Com Card' in order to operate 'Fronius Datalogger Web.'

Required Inverter Software

The correct display of daily energy using Fronius Datalogger Web requires the following inverter software versions:

Inverter	Required software version according to display (MainControl)
Fronius IG 15 - 60	V2.9.4 or higher
Fronius IG 2000 - 5100	starting from series no. 19153444
Fronius IG 300 - 500	V3.6.4.0 or higher
Fronius IG Plus 35 - 150	V4.22.00 or higher

The respective inverter software version can be downloaded for free from our homepage (<http://www.fronius.com>).

Please use a Fronius Update Card to update inverter software.

If you have any questions, please contact pv-support@fronius.com.

- Scope of supply**
- 1 x 'Fronius Datalogger Web' Datalogger with wall mounting device
 - 1 x 'Safety' leaflet
 - 1 x 'Quick Installation' leaflet
 - 1 x Ethernet cable 5 m, blue
 - 1 x Solar Net cable 2 m, red
 - 2 x Terminating plugs
 - 2 x Installation anchors + screws
 - 1 x 'Fronius Solar.access' CD
 - 1 x Relay plug
 - 1 x Relay connector housing
 - 1 x Sticker set

Controls, connections and indicators




Safety


WARNING! Operating the device incorrectly can cause serious injury and damage. Do not use the functions described until you have thoroughly read and understood the following documents:

- these operating instructions
- all operating instructions for system components, especially the safety rules

Controls, connections and indicators

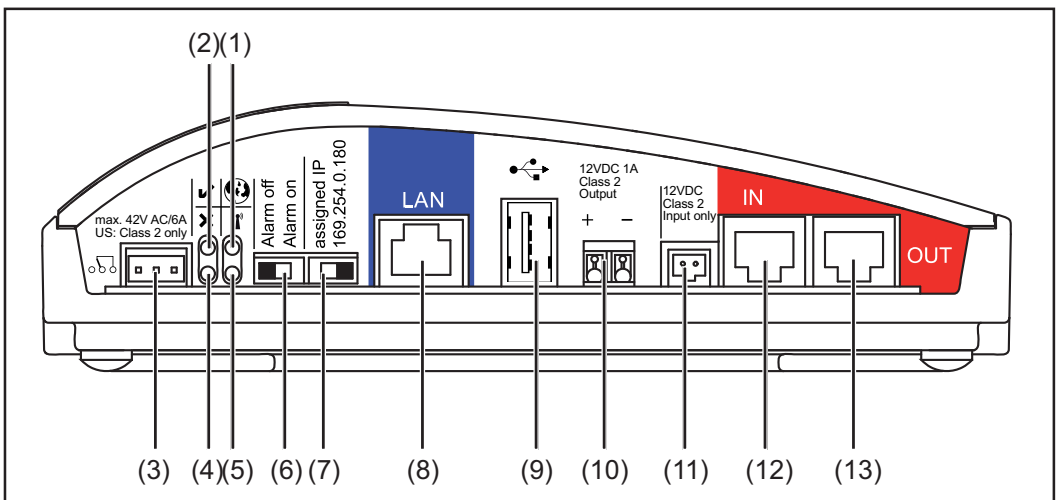

No.	Function	
(1)	Solar Web connection LED	
	<ul style="list-style-type: none"> - lights up green: when there is an existing connection to 'Fronius Solar.web' - lights up red: when there is no connection to 'Fronius Solar.web' but one is required - does not light up: when no connection to 'Fronius Solar.web' is required 	
(2)	Supply LED	
	<ul style="list-style-type: none"> - lights up green: when there is sufficient power coming from 'Fronius Solar Net' - 'Fronius Datalogger Web' is operational - does not light up: when there is no power or not enough power coming from 'Fronius Solar Net' - an external power source for 'Fronius Datalogger Web' is required - flashing red: during updating <p>IMPORTANT Do not interrupt the power supply while updating.</p> <ul style="list-style-type: none"> - lights up red: the update process failed 	
(3)	Relay connection	
	Equipped as an NCC (normally closed contact) and NOC (normally open contact), switches when there is an error	
(4)	Connection LED	
	<ul style="list-style-type: none"> - lights up green: when there is an active connection within 'Fronius Solar Net' - lights up red: when there is an interrupted connection within 'Fronius Solar Net' 	

No.	Function
(5)	<p>WLAN LED T</p> <ul style="list-style-type: none"> - lights up green: when there is a network connection - lights up red: when there is no network connection - does not light up: the 'WLAN stick' is not inserted
(6)	<p>Alarm switch for switching the alarm function on/off</p> <p>Alarm off: Alarm function, relay and buzzer deactivated</p> <p>Alarm on: Alarm function, relay and buzzer activated; when 'Alarm on' is selected, the buzzer and relay are briefly activated as a test of the alarm function</p>
(7)	<p>IP address switch used to switch from an assigned IP address to a default IP address '169.254.0.180' (only relevant to LAN)</p> <p>Assigned IP: 'Fronius Datalogger Web' operates using an assigned IP address (factory setting 192.168.1.180). The IP address can be set on the 'Fronius Datalogger Web' website</p> <p>169.254.0.180: 'Fronius Datalogger Web' operates using a fixed IP address 169.254.0.180; the fixed IP address is used for a direct connection to a PC without having to pre-configure the PC</p>
(8)	<p>LAN connection Ethernet interface colored blue for connecting an Ethernet cable</p>
(9)	<p>USB connection  USB interface for connecting the 'WLAN stick' or 'WLAN stick outdoor' options</p>
(10)	<p>Power supply connection 12 V DC / 1 A, electronic fuse protection for supplying power to external components (e.g., external routers)</p>
(11)	<p>External power supply connection for connecting an external power supply when the power supply within 'Fronius Solar Net' is insufficient (e.g., when too many DATCOM components are installed in 'Fronius Solar Net').</p> <p>Important The external power supply unit for the Fronius Datalogger Web must have a secure disconnect between components supplying grid voltage (SELV or Class 2 for USA/Canada). The output of the power supply unit may not exceed a max. of 15 VA / 1.25 A. If the power supply is sufficient, the Supply LED (2) lights up green.</p>
(12)	<p>Solar Net IN connection 'Fronius Solar Net' input colored red for connecting other DATCOM components (e.g., inverters, sensor cards)</p>
(13)	<p>Solar Net OUT connection 'Fronius Solar Net' output colored red for connecting other DATCOM components (e.g., inverters, sensor cards)</p>

Installing Fronius Datalogger Web



Safety


WARNING! Operating the device incorrectly can cause serious injury and damage. Do not use the functions described until you have thoroughly read and understood the following documents:

- these operating instructions
- all operating instructions for system components, especially the safety rules


NOTE! Installing the 'Fronius Datalogger Web' Datalogger requires knowledge of network technology.

Configuration examples

'Fronius Datalogger Web' networks with an inverter and a PC:

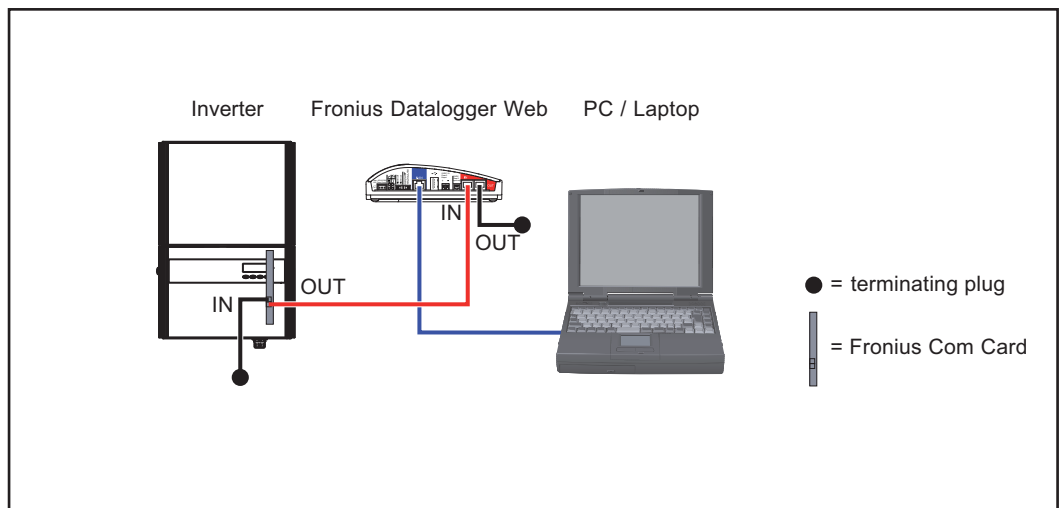


'Fronius Datalogger Web' networks with several inverters, a 'Fronius Sensor Box' and a PC:

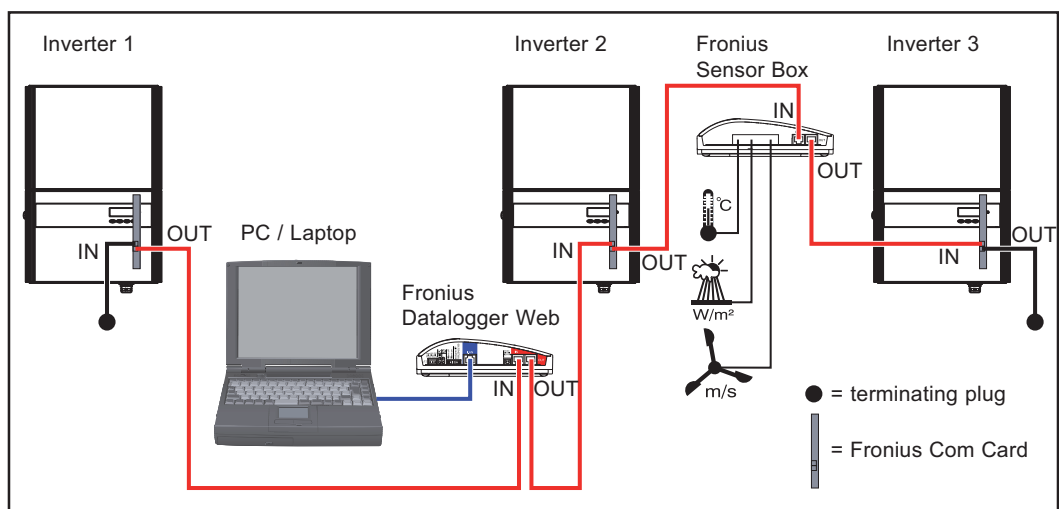

NOTE! When networking several DATCOM components, a termination plug must be placed on each free IN and/or OUT connection of a DATCOM component.

Preparation

IMPORTANT Please follow the operating instructions for the inverter as well as the 'Fronius IG DATCOM Detail' operating instructions.

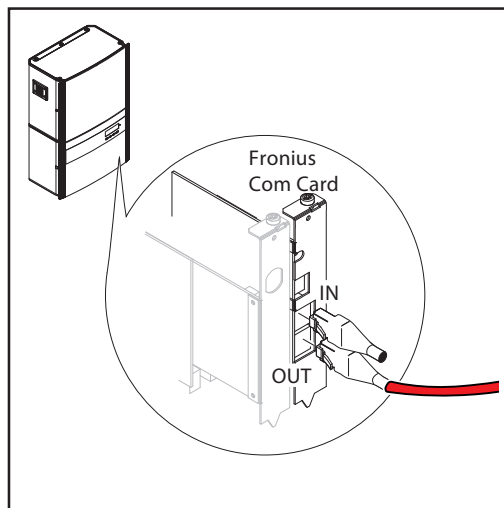


- 1 Install 'Fronius Datalogger Web' in the proper position using the screws and installation anchors provided in the scope of supply
- 2 Insert the red Solar Net cable into the Solar Net output (OUT) of the 'Fronius Com Card'
- 3 If the 'Fronius Com Card' is the last DATCOM component in the network:
Insert a terminating plug into the Solar Net OUT connection

Installing 'Fronius Datalogger Web'



CAUTION! DATCOM components and/or the PC/laptop will be damaged if the Ethernet or Solar Net cables are connected incorrectly.

- The Ethernet cable should only be inserted into the LAN connection (colored blue)
- The Solar Net cable should only be inserted into the Solar Net IN or Solar Net OUT connections (colored red)

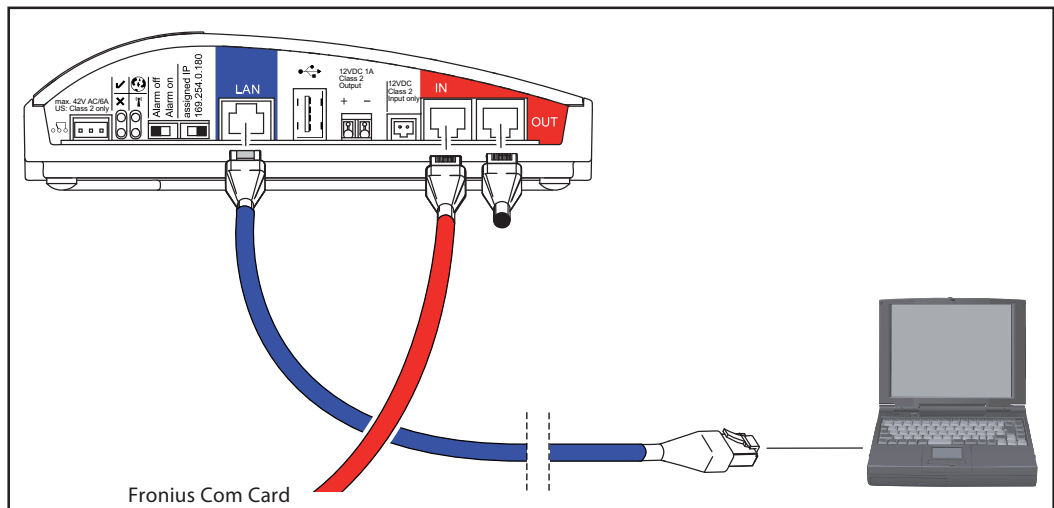

- 1 Insert the red Solar Net cable into the Solar Net output (OUT) of the 'Fronius Com Card'
- 2 If the 'Fronius Com Card' is the last DATCOM component in the network:
Insert a terminating plug into the Solar Net OUT connection

If there are additional DATCOM components in the network after the 'Fronius Datalogger Web':
Insert an additional Solar Net cable into the Solar Net OUT connection

- 3 Insert the blue Ethernet cable into the LAN connection
- 4 Insert the blue Ethernet cable into the PC/laptop or into a corresponding network connection

Fronius Datalogger Web network configuration



General

The network configuration function patented by Fronius enables the 'Fronius Datalogger Web' to:

- establish an easy connection between 'Fronius Datalogger Web' and the PC/laptop
- make settings
- display important system data

Requirements



NOTE! The network configuration of the 'Fronius Datalogger Web' Datalogger requires knowledge of network technology.

If the 'Fronius Datalogger Web' is being integrated into an existing network, the 'Fronius Datalogger Web' address must be adapted to the network.

Example: Network address range = 192.168.1.x, subnet mask = 255.255.255.0

- An IP address between 192.168.1.1 and 192.168.1.254 must be assigned to the 'Fronius Datalogger Web.'
- The IP address selected may not be already assigned in the network.
- The subnet mask must correspond to the existing network (e.g., 255.255.255.0).

If the 'Fronius Datalogger Web' will be sending service messages and/or data to 'Fronius Solar.web,' then a gateway address and a DNS server address must also be entered. 'Fronius Datalogger Web' uses the gateway address to access the Internet. The IP address of the DSL router can be used as a gateway address, for example.

IMPORTANT

- 'Fronius Datalogger Web' may not have the same IP address as the PC/laptop.
- 'Fronius Datalogger Web' cannot connect by itself to the Internet. A router must be used for a DSL connection to the Internet.

If the network connection uses WLAN, then one of the following options is required:

- 'WLAN stick' (41,0018,0070)
- 'WLAN stick outdoor' (41,0018,0071)


'Fronius Datalogger Web' network configuration

The Fronius Datalogger Web network configuration comprises the following steps:


- Installing 'Fronius Datalogger Web' and going to the 'Fronius Datalogger Web' homepage
- Entering network data
- Setting 'Fronius Datalogger Web' for the WLAN connection
- Setting the IP address and connecting 'Fronius Datalogger Web' to the network

Installing 'Fronius Datalogger Web' and going to the 'Fronius Datalogger Web' homepage

- 1** Only if you are using the WLAN network connection: connect the 'WLAN stick' or 'WLAN stick outdoor' option to the USB port
- 2** Install 'Fronius Datalogger Web'

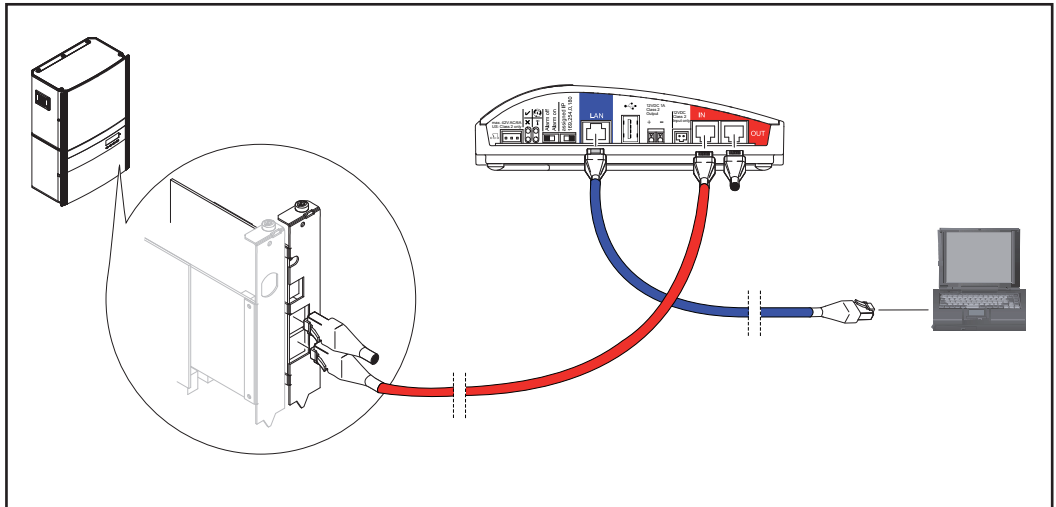

- 3** Set the IP address switch on the 'Fronius Datalogger Web' to '169.254.0.180'

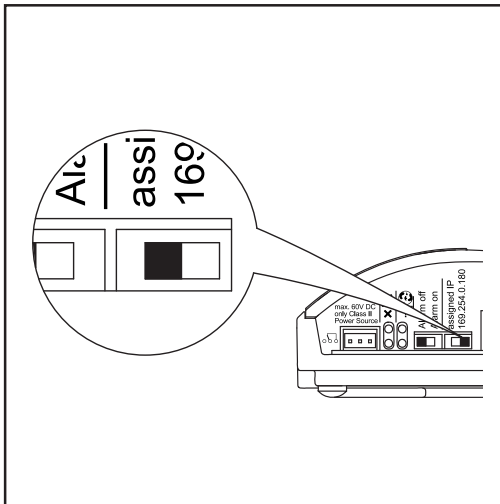

- 4** Wait approx. 1 minute until the 'Connectivity' icon appears in the PC/laptop taskbar.




- 5** Open the PC's/laptop's Internet browser (e.g., Microsoft Internet Explorer)
- 6** Enter 'http://169.254.0.180' in the address field

The 'Fronius Datalogger Web' website will appear.


Entering network data

The 'Fronius Datalogger Web' website will appear.

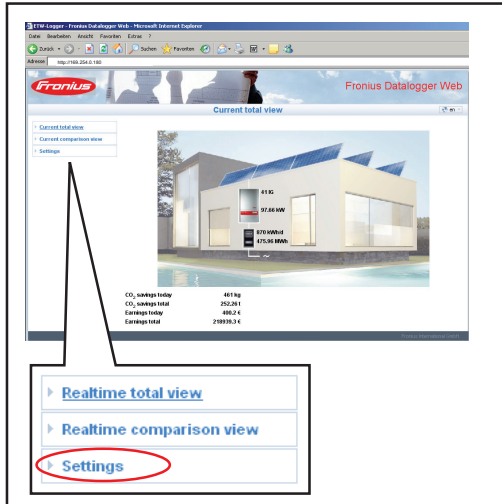


1 Click on the 'Settings' menu item

The 'Settings' submenu is displayed.

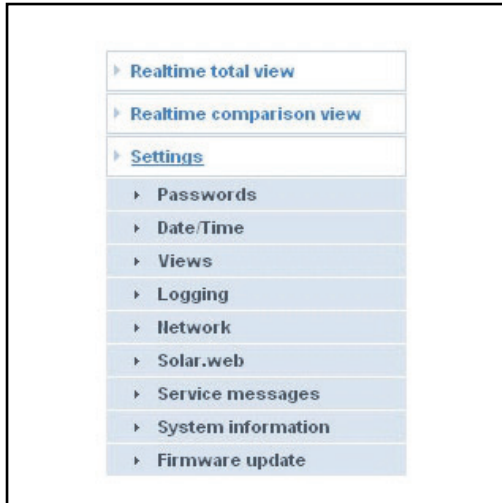

2 Click on 'Network'

The 'Network' submenu is displayed.

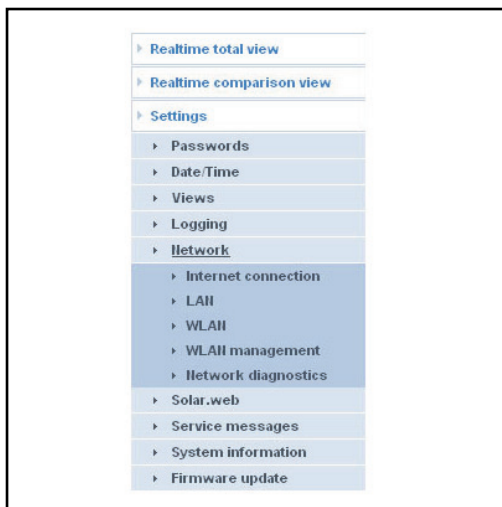

- 3 To define the Internet connection (e.g., to 'Fronius Solar.web'):
Click on 'Internet connection'

The Internet connection settings are displayed.

Internet connection via LAN via WLAN (1)

Save Cancel (2)

- *) WLAN can only be used when one of the two options ('WLAN stick' or 'WLAN stick outdoor') is inserted in the 'Fronius Datalogger Web.'

- 4 Select the type of Internet connection (LAN or WLAN) (1)

- 5 Click on 'Save' (2)

After the changes have been loaded, the message 'Changes have been applied' is displayed.

- 6 Click on 'OK'

The Internet connection data are displayed.

IMPORTANT You may also have to enter a gateway and a DNS server depending on the Internet connection option selected.

For example, if 'LAN' was selected for the Internet connection, a gateway and a DNS server must be entered for the 'LAN' interface.

- 7 Click on 'LAN' or 'WLAN' in the 'Network' submenu depending on the network connection interface you are using.

The interface settings are displayed (LAN or WLAN).

Obtain address static dynamic (3)

Host name

IP address

Subnet mask

Gateway

DNS server

Save Cancel (4)



8 Select either a static or dynamic IP address (3)

Obtain IP address statically (factory setting):

- The user enters a fixed (static) IP address for the 'Fronius Datalogger Web' and also manually sets the subnet mask, gateway address and the DNS server address (from provider). Obtain IP address dynamically:

Obtain IP address dynamically:

- The 'Fronius Datalogger Web' obtains its IP address from a DHCP server (DHCP = dynamic host configuration protocol).
- The DHCP server must be configured so that the 'Fronius Datalogger Web' is always assigned the same IP address. This enables you to always know under which IP address the 'Fronius Datalogger Web' can be reached.
- If the DHCP server supports the 'DNS dynamic updates' function, a name can be entered for the 'Fronius Datalogger Web' in the 'Hostname' field. The connection to the 'Fronius Datalogger Web' can then take place via the name instead of the IP address.

Example: Hostname = samplesystem, Domain name = fronius.com

The 'Fronius Datalogger Web' can be accessed via the 'samplesystem.fronius.com' address

9 Click on 'Save' (4)

After the changes have been loaded, the message 'Changes have been applied' is displayed.

10 Click on 'OK'

The interface settings are displayed (LAN or WLAN).


Setting 'Fronius Datalogger Web' for the WLAN connection

The following steps are only required if you decide to use the WLAN network connection at a later date.

- 1** Click on 'WLAN' in the 'Network' submenu.
- 2** Enter the settings for the WLAN interface

- 3 Click on 'WLAN management' in the 'Network' submenu.

'WLAN management' is displayed with the available networks (1).

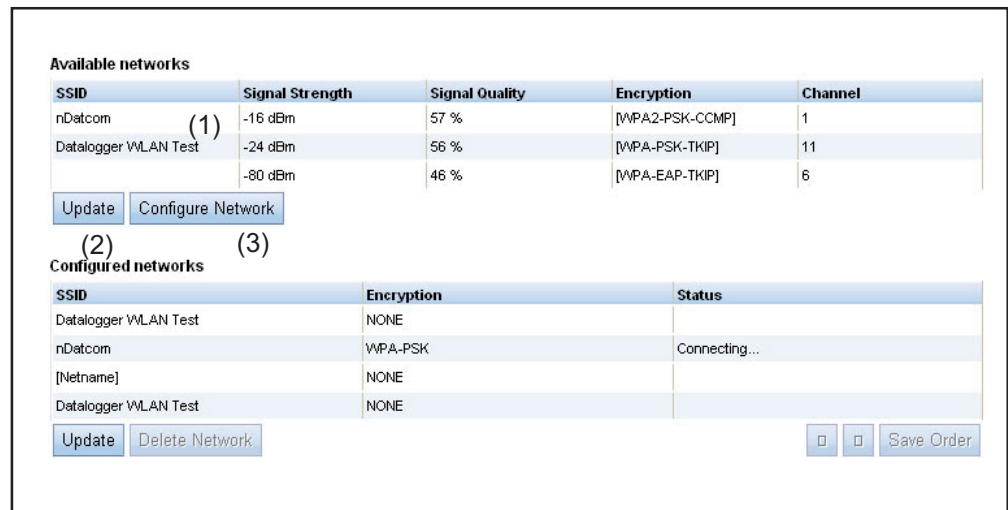


- 4 Click on 'Update' (2) to update the networks

- 5 Select a suitable network by clicking on it

- 6 Click on 'Configure Network' (3).

'Configure Network' is displayed.

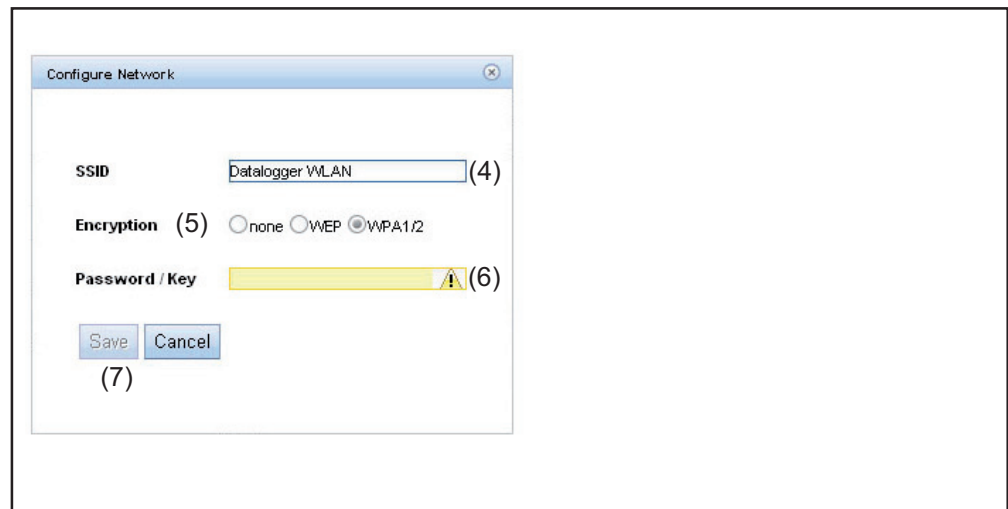

- 7 Enter the SSID network name (4)

- 8 Enter the encryption type (5):

none = no encryption

WEP = hexagonal encryption

WPA1/2 = encryption via pass phrase (8 - 63 ASCII characters)



- 9 Only if WEP or WPA1/2 encryption has been selected:
enter the corresponding pass phrase / key (6)

- 10 Click on 'Save' (7)

After the changes have been loaded, the message 'Changes have been applied' is displayed.

- 11 Click on 'OK'

'WLAN management' is displayed.

Available networks				
SSID	Signal Strength	Signal Quality	Encryption	Channel
nDatcom	-16 dBm	57 %	[WPA2-PSK-CCMP]	1
Datalogger WLAN Test	-24 dBm	56 %	[WPA-PSK-TKIP]	11
	-80 dBm	46 %	[WPA-EAP-TKIP]	6

Update Configure Network

Configured networks		
SSID	Encryption	Status
Datalogger WLAN Test	NONE	
nDatcom	WPA-PSK	Connecting...
[Netname]	NONE	
Datalogger WLAN Test	NONE	


Update Delete Network [Up] [Down] Save Order

(8) (9)

You can use the arrow keys (8) and the 'Save Order' key (9) to change the sequence of displayed networks.

Setting the IP address and connecting 'Fronius Datalogger Web' to the network

- 1 Set the IP address switch on the 'Fronius Datalogger Web' to 'assigned IP'

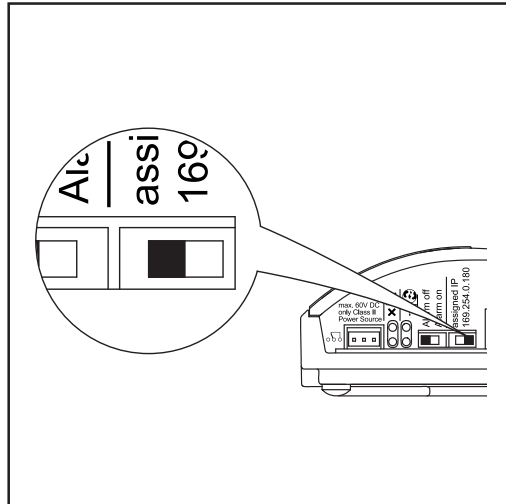

The network settings are applied.

- 2 Connect 'Fronius Datalogger Web' to the respective network via the LAN or WLAN connection


Network settings for PC/laptop

General

The PC/laptop is also a member of the network and must also be assigned a unique network address like the Datalogger.


If the PC is already integrated in the network, no further settings are required.

Network settings for PC/laptop

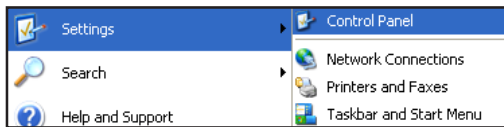


1 Start / Control Panel / Network and Internet Connections


2 Double-click on 'Network Connections'

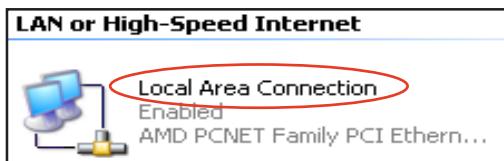

3 Double-click on 'Local Area Connection'

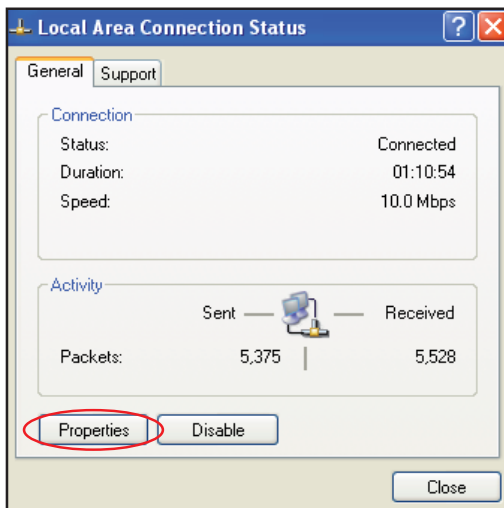


4 Click on the 'Properties' button in the 'General' tab

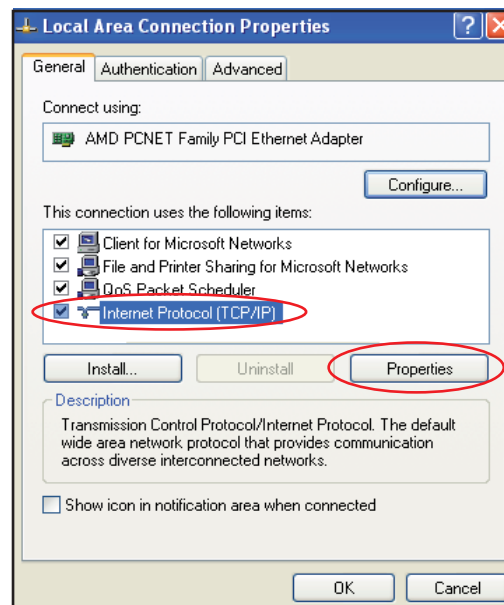

5 Click on 'Internet Protocol (TCP/IP)'

6 Click on the 'Properties' button

The 'Internet Protocol (TCP/IP) Properties' window will appear.

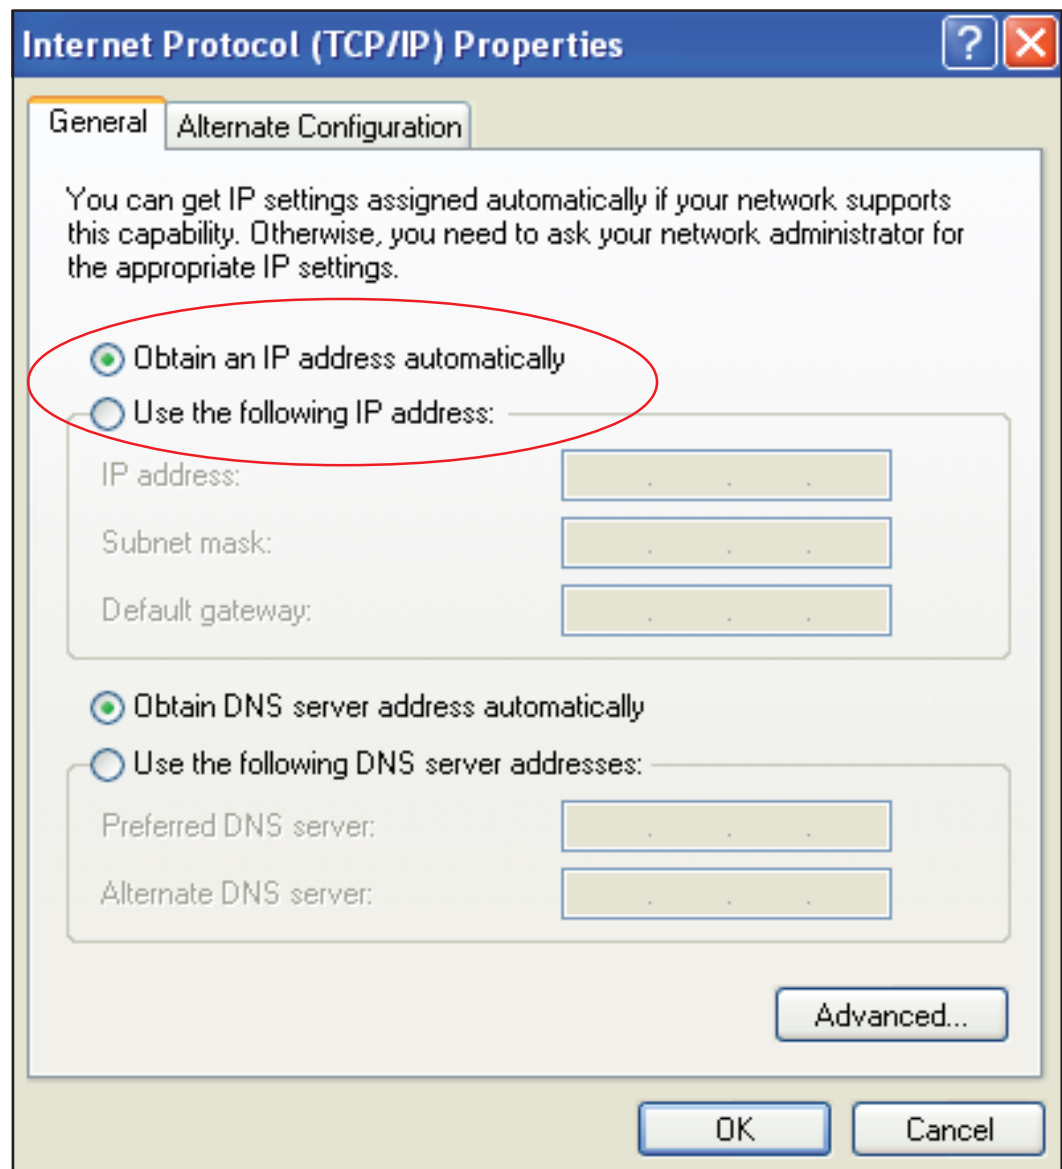

If a DHCP server is available in the network:

7 Select 'Obtain an IP address automatically'

If a DHCP server is not available in the network:

7a Select 'Use the following IP address'

7b Assign a unique IP address to the PC/laptop


Example: Network address range = 192.168.1.x, subnet mask = 255.255.255.0

- An IP address between 192.168.1.1 and 192.168.1.254 must be assigned to the PC/laptop.
- The IP address selected may not be already assigned in the network.
- The subnet mask must correspond to the existing network (e.g., 255.255.255.0).
- The 'Default gateway' setting is not relevant to the 'Fronius Datalogger Web' connection.


IMPORTANT The PC/laptop must not have the same IP address as the 'Fronius Datalogger Web.'

8 Activate 'Obtain DNS server address automatically'


Internet options for PC/laptop

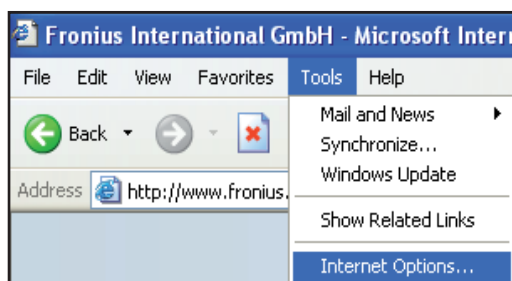


- 1 Open the Internet browser (e.g., Microsoft Internet Explorer)
- 2 Click on 'Tools'
- 3 Click on 'Internet Options'

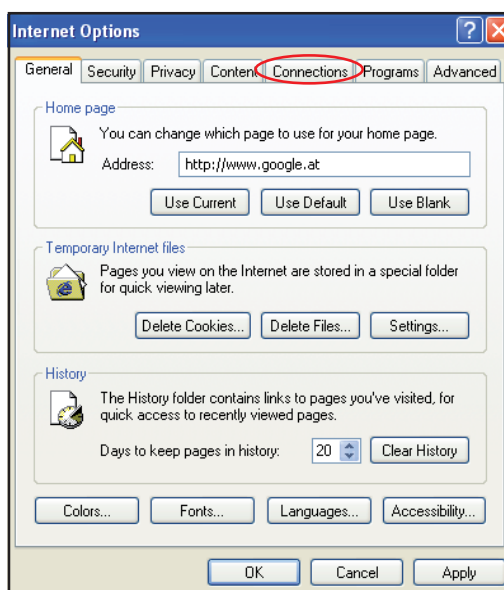

- 4 Click on the 'Connections' tab

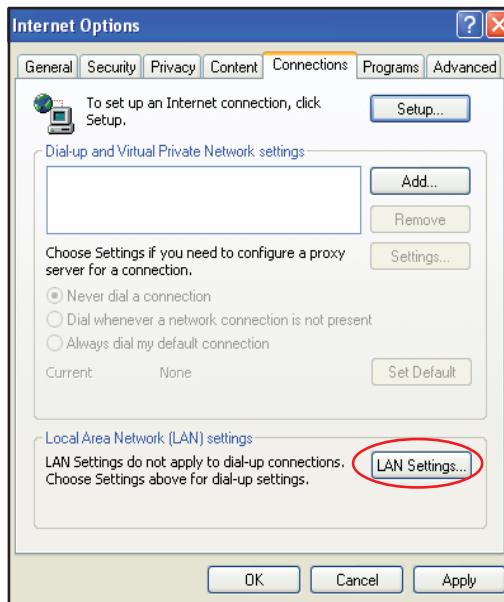


5 Click on the 'LAN settings' button at the bottom

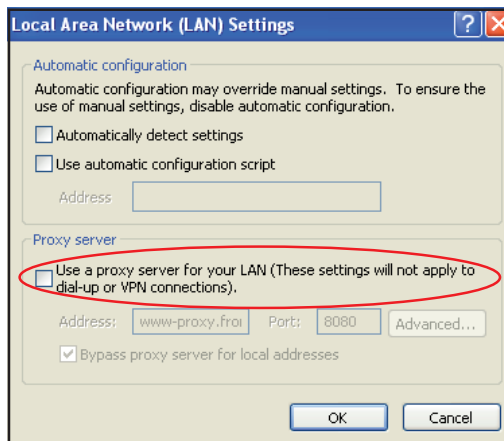

6 When the 'Use a proxy server for your LAN' option is not activated like in the picture, the setting options below it are grayed and not accessible.

When 'Use a proxy server for your LAN' is activated:

- Click on 'Advanced'

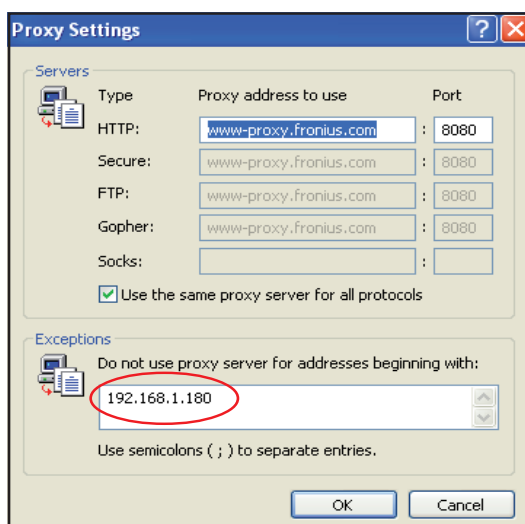

- Enter the IP address of the 'Fronius Datalogger Web' in the 'Exceptions' field, e.g., 192.168.1.180
- Click on "OK"

Connecting to 'Fronius Datalogger Web' via Internet browser



General

The connection to the 'Fronius Datalogger Web' via an Internet browser is suitable for accessing simple information by several PC users in a LAN (e.g., company networks, schools).

For example, total and daily yields can be accessed and/or inverter comparisons can be made on the 'Fronius Datalogger Web' website.


Requirements

- At least a LAN or WLAN connection
- Internet browser (e.g., Microsoft Internet Explorer IE6.0, Firefox 2)
- PC/laptop in the same network segment as the 'Fronius Datalogger Web'

Connecting to 'Fronius Datalogger Web' via Internet browser

- 1 Open Internet browser
- 2 Enter the IP address or the hostname and domain name of the 'Fronius Datalogger Web'

The 'Fronius Datalogger Web' website will appear.

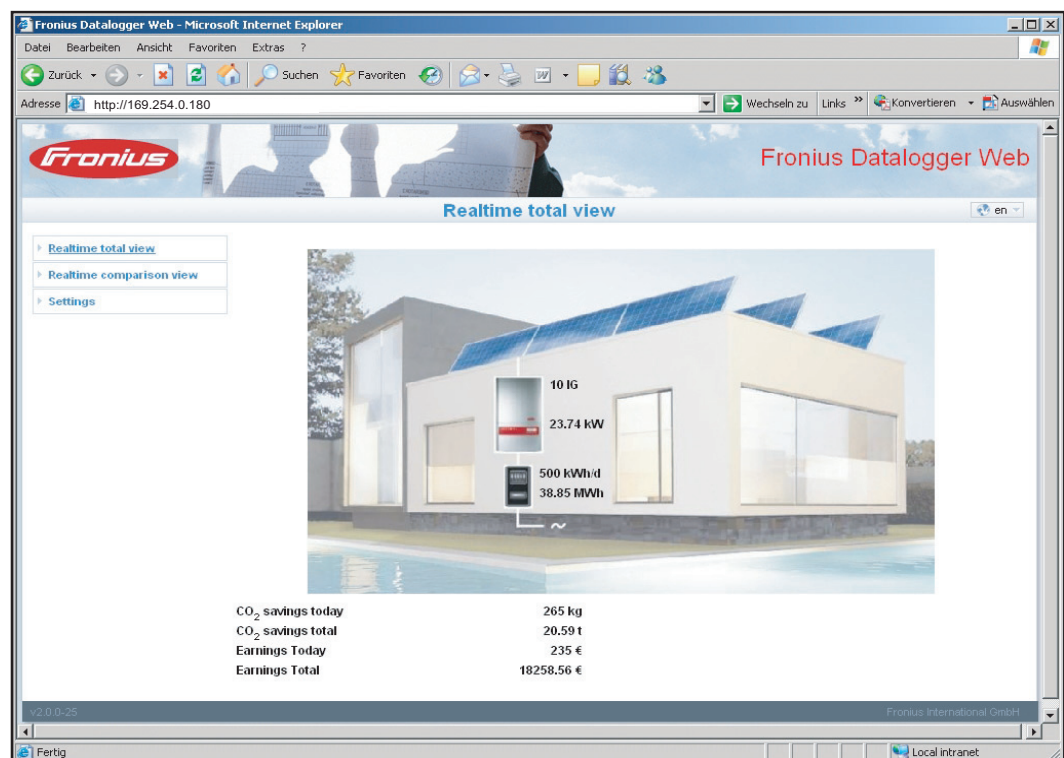

Assign an IP address or hostname as per the section 'Fronius Datalogger Web network configuration'.

For the network administrator

To access the Datalogger website outside of the LAN:

- Configure the network router so that requests are forwarded to port 80/TCP on the Datalogger

Connecting to 'Fronius Datalogger Web' via 'Fronius Solar.access'




General

The connection to the 'Fronius Datalogger Web' via 'Fronius Solar.access' is suitable for detailed long-term data recording and offers full settings options and data preparation for the photovoltaic system.

Requirements

- At least a LAN or WLAN connection
- Internet browser: Microsoft Internet Explorer IE6.0
- Network configuration of Datalogger as per section 'Fronius Datalogger Web network configuration'
- PC/laptop in the same network segment as the 'Fronius Datalogger Web'
- PC/laptop operating system: Win 2000, Win XP, Win Vista or Win 7
- 'Fronius Solar.access' software installed on the PC/laptop (the 'Fronius Solar.access' software is included on the CD)
- Photovoltaic system created in 'Fronius Solar.access' as per 'Fronius Solar.access' online help (Open 'Fronius Solar.access' / Administration / PV Systems / Set up PV System)

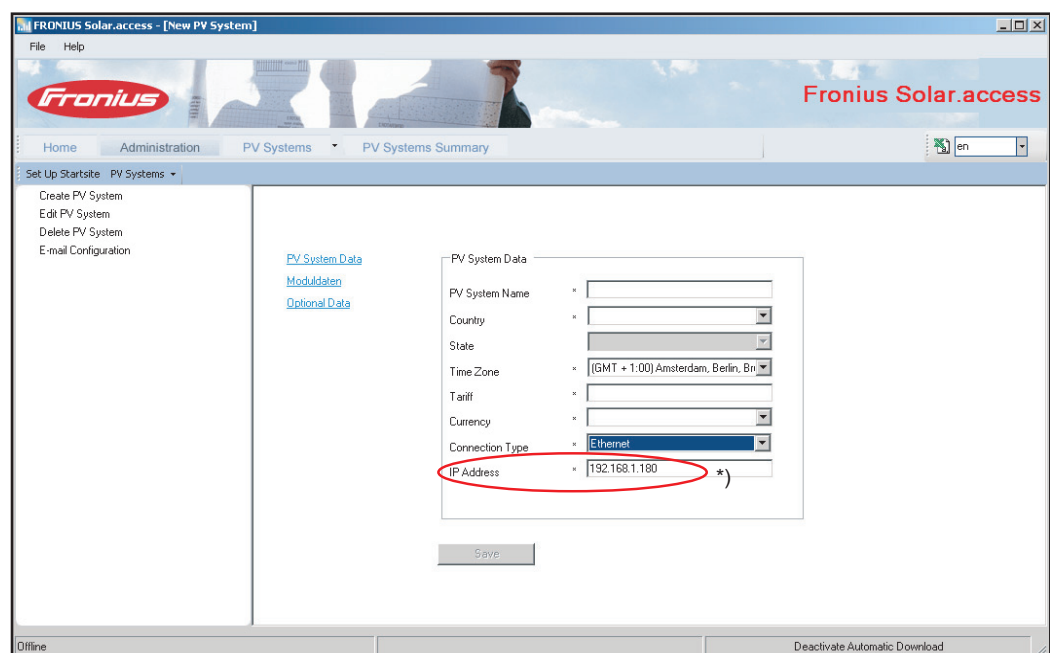

*) Assigned IP address or assigned hostname for 'Fronius Datalogger Web'

Connecting to 'Fronius Datalogger Web' via 'Fronius Solar.access'

- 1 Open 'Fronius Solar.access' software
- 2 Select 'PV Systems'
- 3 Select the desired photovoltaic system

After a brief time, the connection is made to the selected photovoltaic system. 'Online' and the version of the Datalogger will be displayed in the bottom left status bar.

For the network administrator

To access the Datalogger outside of the LAN:

- Configure the network router so that requests are forwarded to port 80/TCP and port 15015/TCP on the Datalogger

Connecting to 'Fronius Datalogger Web' via the Internet and 'Fronius Solar.web'



General

Using the connection to the 'Fronius Datalogger Web' via the Internet and 'Fronius Solar.web,' you can access archived data and realtime PV system data from anywhere via the Internet.

In addition, you can also provide other users with guest access so that they can view your photovoltaic system as well as make a comparison of several systems.

Function overview

The Datalogger is connected to the Internet (e.g., via a DSL router). The Datalogger logs on to 'Fronius Solar.web' on a regular basis and sends its saved data every day.


'Fronius Solar.web' can establish active contact with 'Fronius Datalogger Web', e.g., to display realtime data.

Requirements

- Internet access
- Internet browser

IMPORTANT 'Fronius Datalogger Web' cannot connect by itself to the Internet. A router must be used for a DSL connection to the Internet.

- Registration of photovoltaic system with 'Fronius Solar.web' (1)
The Datalogger ID is required for the registration. The Datalogger ID is available in Settings / System Information.
- In order to access realtime data in 'Fronius Solar.web,' the 'Yes' selection option must be activated under 'Send current data to Solar.web' in 'Fronius Datalogger Web' (2).
- In order to access archived data in 'Fronius Solar.web,' the 'Daily at' or 'Hourly' selection option must be activated under 'Send archive data to Solar.web' in 'Fronius Datalogger Web' (3).

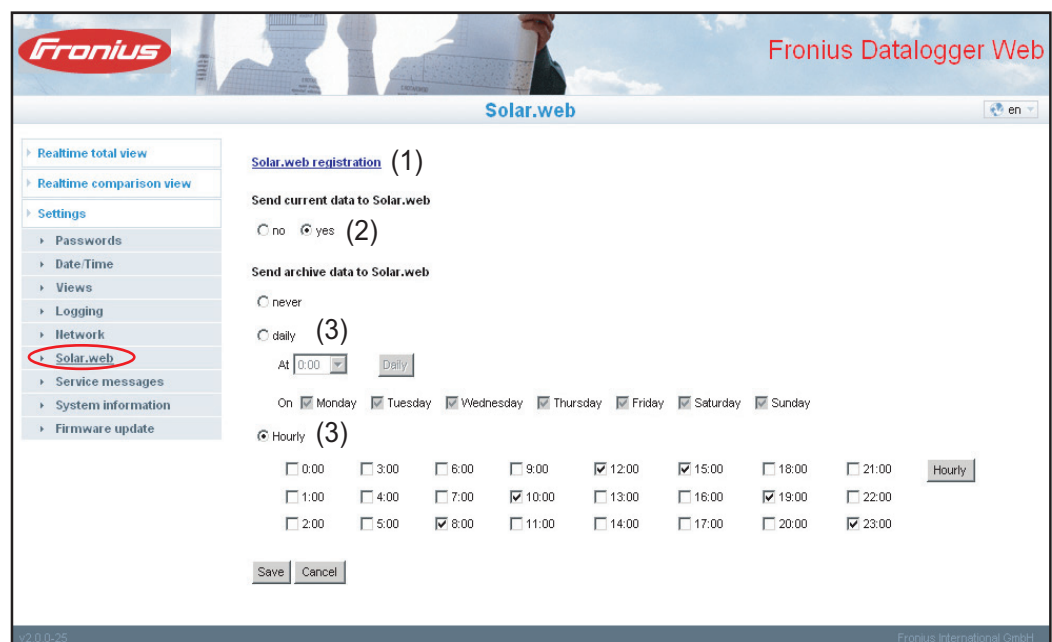

Accessing data from 'Fronius Datalogger Web' via the Internet and 'Fronius Solar.web'

To access realtime and archived data from 'Fronius Datalogger Web' using 'Fronius Solar.web':

- 1 Open the 'Solar Electronics' heading on the Fronius website 'www.fronius.com'
- 2 Start 'Fronius Solar.web'

For more information about 'Fronius Solar.web,' see the online help.

For the network administrator

Configure the firewall so that the IP address of the Datalogger can send data to port 49049/UDP from 'solarweb.fronius.com.'

DSL routers mostly enable you to send data to the Internet and, therefore, do not normally have to be configured.

General information for the network administrator



General firewall settings

The firewall must be configured as follows in order to be able to use the different 'Fronius Datalogger Web' functions:

	49049/UDP output	15015/TCP input	80/TCP input
Sending service messages	x	-	-
Connecting to Datalogger via 'Fronius Solar.web'	x	-	-
Connecting to Datalogger via 'Fronius Solar.access'	-	x	x
Access to the 'Fronius Datalogger Web' website	-	-	x

Service messages are sent via Fronius Solar.web.

Sending service messages via a DSL Internet connection

Normally, no additional router configuration is required for a regular DSL Internet connection for accessing 'Fronius Solar.web' and/or sending service messages, because connections from the LAN to the Internet are open.

Using 'Fronius Solar.web' and sending service messages

However, an Internet connection is required to use 'Fronius Solar.web' and send service messages.

'Fronius Datalogger Web' cannot connect by itself to the Internet. A router must be used for a DSL connection to the Internet.

'Fronius Datalogger Web' views

Overview


The following views are displayed on the 'Fronius Datalogger Web' website:

- Current total view
- Current comparison view

Current total view

The Current total view contains:

- PV system power data
- CO₂ savings per day and total
- Yield per day and total
- Sensor Card data (if available)

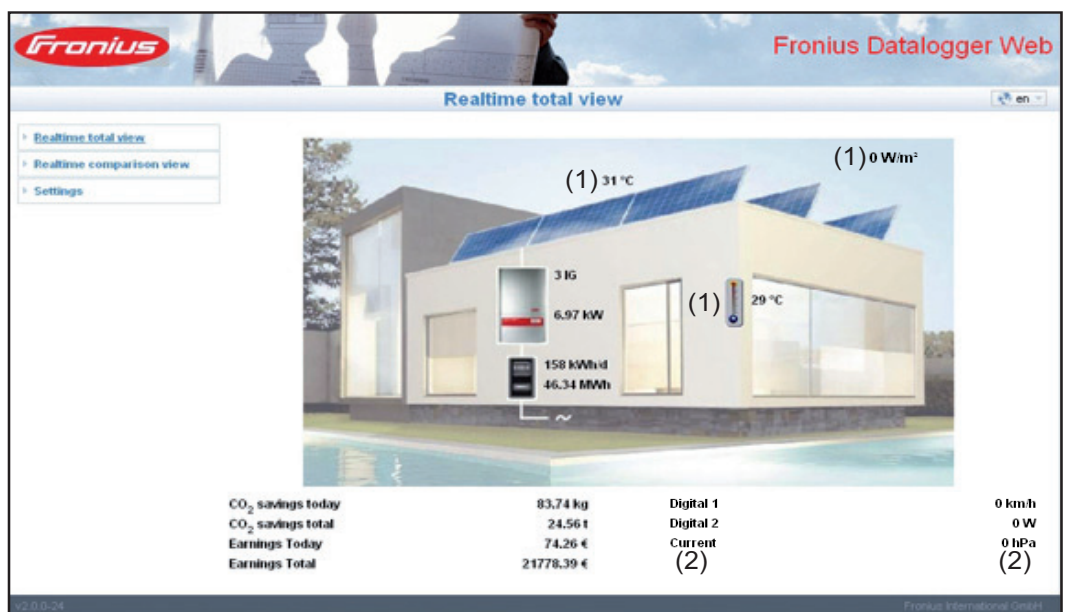

Sensor Card data in graphic display (1):

the first three measuring channels of 'Sensor Card 1' are displayed

Sensor Card data under graphic display (2):



starting with Sensor Card 0, the first four active measuring channels of Sensor Cards available in the system are displayed

Current comparison view

Several inverters in the same PV system can be compared to each other in the Current comparison view.

The realtime inverter AC power is displayed as a percentage of the power from the solar module connected to the respective inverter (shown in a bar diagram). A bar is displayed for each inverter. The bar color indicates the power range of the inverter:

- Green: the inverter power corresponds to the average power of all inverters
- Yellow: the inverter power deviates slightly from the average power of all inverters
- Red: the inverter power deviates strongly from the average power of all inverters or an error has occurred in the inverter

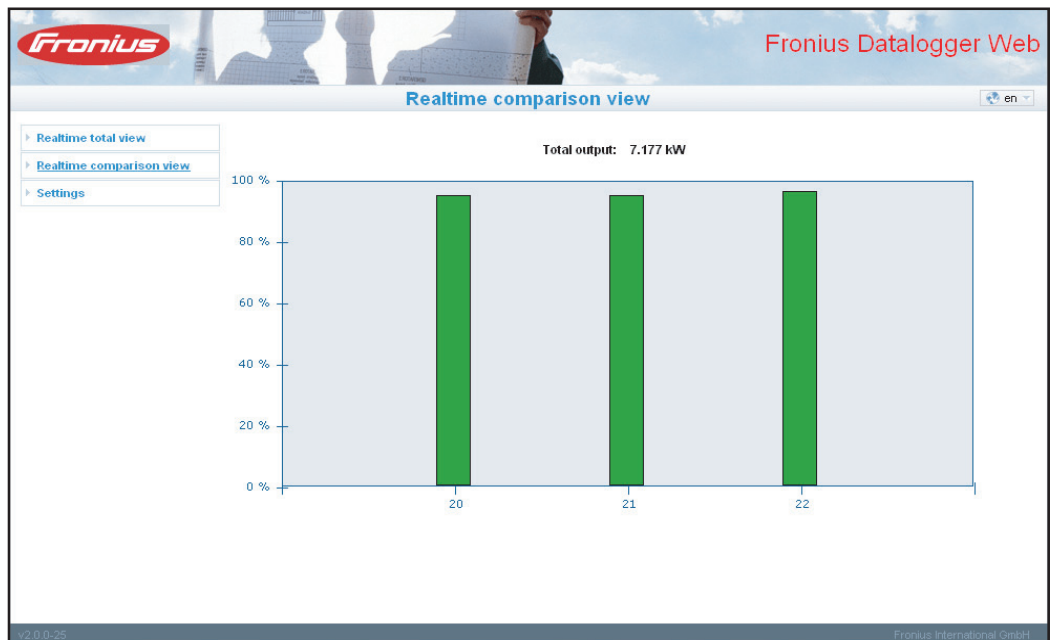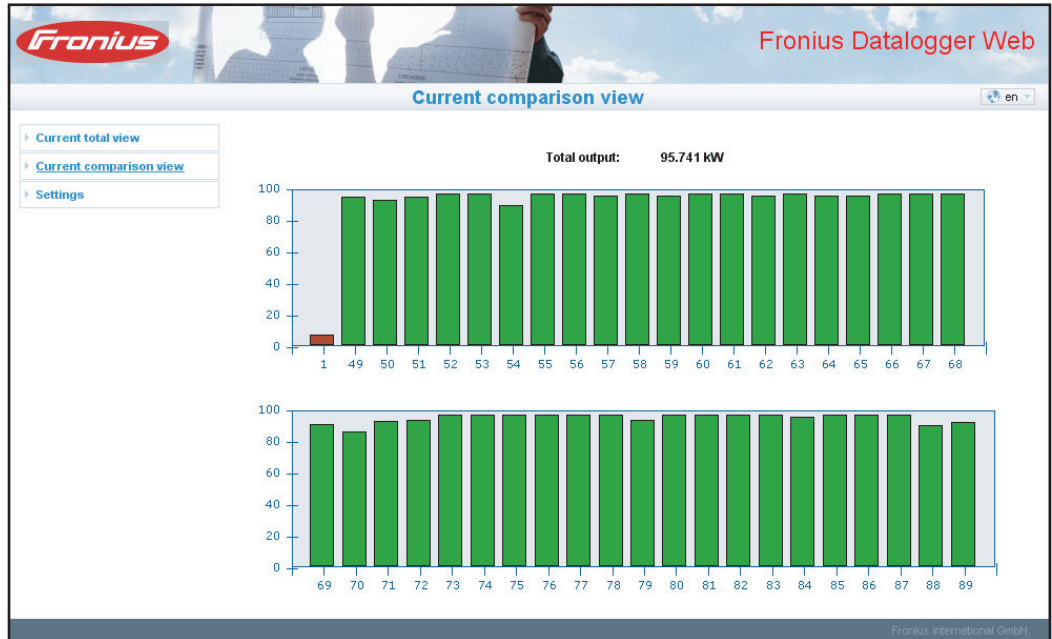

'Fronius Datalogger Web' settings

Overview


The following selection options are available in the 'Settings' menu of the 'Fronius Datalogger Web' website:

- Passwords
- Date / Time *)
- Views
- Logging
- Network
- Solar.web
- Service Messages
- System Information
- Firmware Update

*) The Date/Time setting is mandatory

The individual selection options will be explained in the following sections.

Accessing and editing selection options

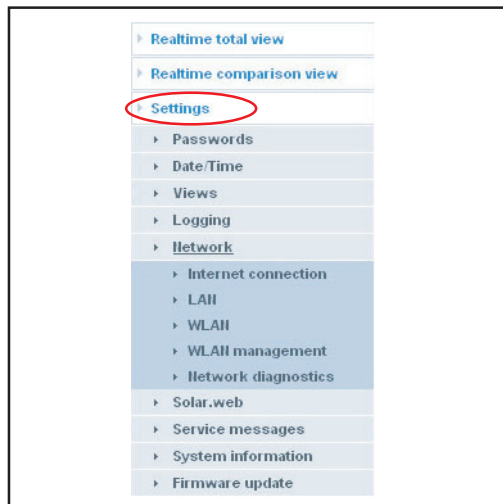

- 1 Connect to 'Fronius Datalogger Web'
- 2 Click on the 'Settings' menu item
- 3 Click on the desired selection option

The desired selection option will open

- 4 View/Edit selection option
- 5 If required, click on the respective button (e.g., Save, Synchronize, Update)

The changed data are applied.

Passwords




General

Access to 'Fronius Datalogger Web' is regulated by assigning passwords. There are 2 different password types available:

- The user password
- The administrator password

IMPORTANT New passwords are only activated when the 'IP address' switch on the Datalogger is set to 'assigned IP.'


Passwords

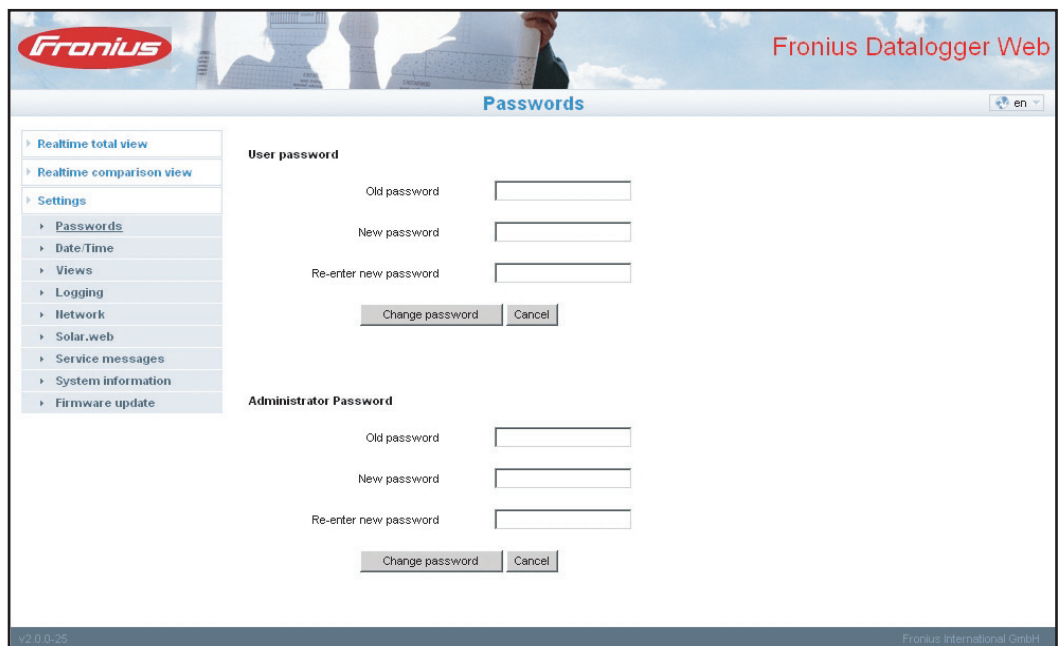

User password

An assigned user password only gives the user read access to 'Fronius Datalogger Web.' The user cannot open the 'Settings' menu.

Users must enter their username and password every time they connect to 'Fronius Datalogger Web.'

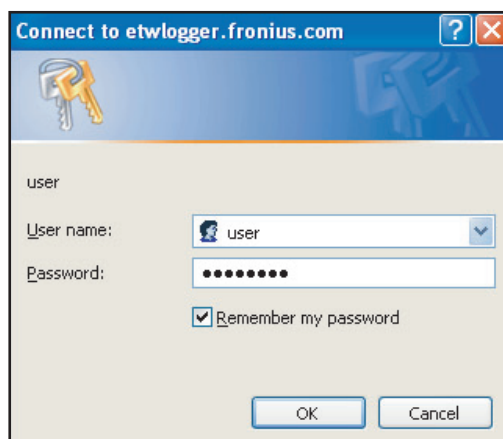

Username = user

Administrator Password

An assigned administrator password gives the user both read and write access to 'Fronius Datalogger Web.' The user can then open the 'Settings' menu and make any changes as desired.

When assigning an administrator password, the user must enter the username and password in 'Fronius Datalogger Web' to open the 'Settings' menu.



Username = admin

Forgot Your Password?

- 1 Make a direct connection to 'Fronius Datalogger Web' as per the 'Quick Installation' leaflet

The 'Fronius Datalogger Web' website will appear (no request for passwords)

- 2 Enter new passwords

Time/Date



General

The date and time handle several tasks in the system.
The time and date are saved for every data record that is logged.



NOTE! You must set the time and date in order to operate 'Fronius Datalogger Web.' This is the only way in which Datalogger data can be recorded.

Time/Date

Realtime total view

Realtime comparison view

Settings

- Passwords
- Date/Time**
- Views
- Logging
- Network
- Solar.web
- Service messages
- System information
- Firmware update

Date/Time for Datalogger

07 : 15 : 38 (1) 29 . 04 . 2010 (2) (UTC+01:00) Amsterdam, Berlin, Bern, Rome, Stockholm, Vien (3)

Set Date/Time

PC sync Automatically adjust for daylight saving changes (5)

Manual (4)

07 : 15 : 07 (6) 29 . 04 . 2010 (7) (UTC+01:00) Amsterdam, Berlin, Bern, Rome, Stockholm, Vien (8)

Synchronize (9) Cancel (10)

v2.0.0-25 Fronius International GmbH

Realtime total view

Realtime comparison view

Settings

- Passwords
- Date/Time**
- Views
- Logging
- Network
- Solar.web
- Service messages
- System information
- Firmware update

Date/Time for Datalogger

07 : 27 : 07 (1) 29 . 04 . 2010 (2) (UTC+01:00) Amsterdam, Berlin, Bern, Rome, Stockholm, Vien (3)

Set Date/Time

PC sync Automatically adjust for daylight saving changes (5)

Manual (4)

07 : 26 : 24 (6) 11 . 03 . 2009 (7) (7a) (UTC+01:00) Amsterdam, Berlin, Bern, Rome, Stockholm, Vien (8)

(7b)

Synchronize (9) Cancel (10)

v2.0.0-25 Fronius International GmbH

- (1) Datalogger time display
- (2) Datalogger date display
- (3) Datalogger time zone
- (4) Date/Time setting option: synchronize to PC/laptop or manual
- (5) Automatically adjust for daylight savings time

IMPORTANT For the automatic daylight savings time setting, the correct time zone must be selected.

- (6) Time from PC/laptop for PC synchronization setting Field for setting the time for the manual setting
- (7) Date from PC/laptop for PC synchronization setting
- (7a) Calendar icon
- (7b) Calendar (opens when you click on the calendar icon)
- (8) Field for setting the time zone
- (9) 'Synchronization' button
- (10) 'Cancel' button


Views



General

Configuration of the 'Fronius Datalogger Web' website takes place in the views. The language, yield and data for the Comparison and Total view can be set here. A sub-menu is available for settings related to inverters and Sensor Cards.

Views

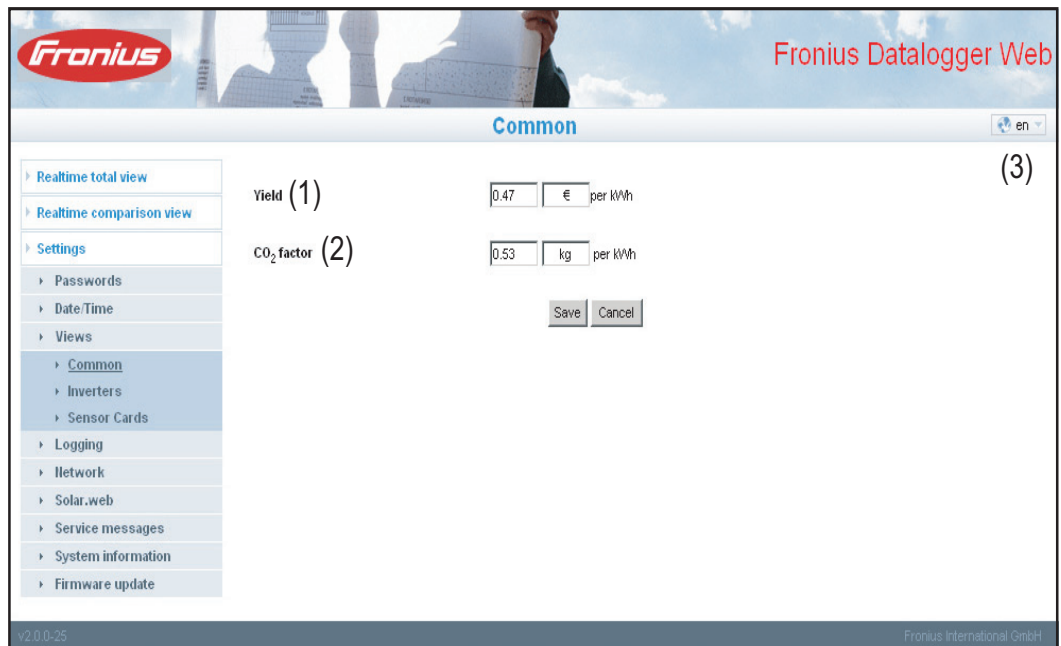


'General' view

You can enter the charge rate per kWh and the currency for calculating the yield in 'Yield' (1). The yield is shown in the Current total view.

You can enter the CO2 savings per kWh and the unit for calculating the CO2 savings in 'CO2 factor' (2). The CO2 savings are shown in the Current total view.

The 'Fronius Datalogger Web' website will appear in the language set in the browser or in the last language selected. The language can be changed in the language selection fields (3).

Inverter views

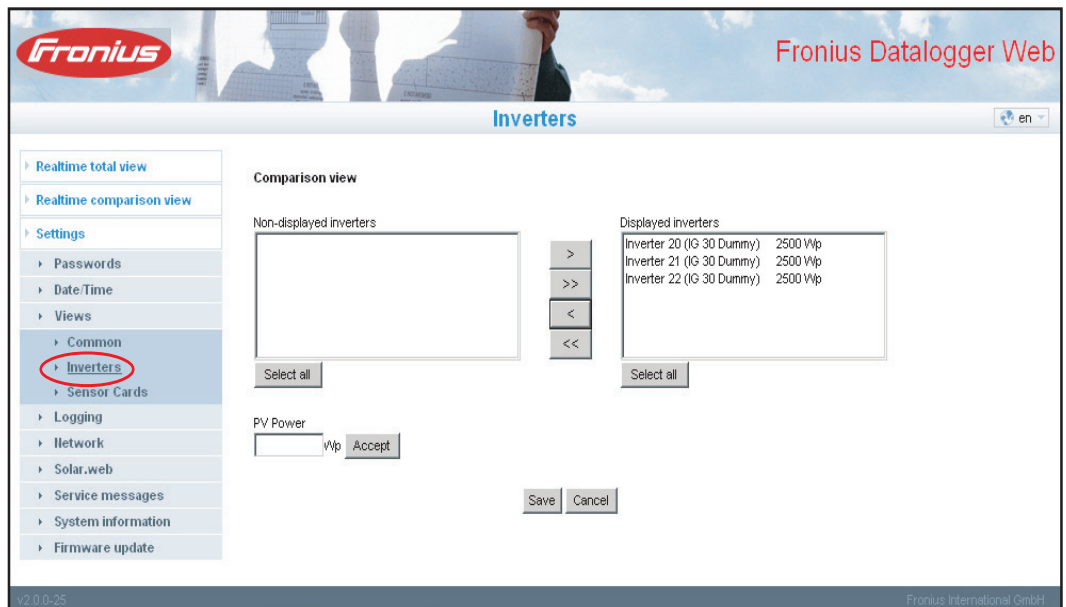


The data for the comparison view is defined in 'Inverters:'

- 1 Select an inverter to be displayed in the Comparison view
- 2 Enter the respective solar module power for each inverter (the nominal output of the inverter is entered by default)
- 3 Assign PV power to the respective inverter using the 'Accept' button
- 4 Click on 'Save'

The settings for the Comparison view are applied.

Sensor Card views

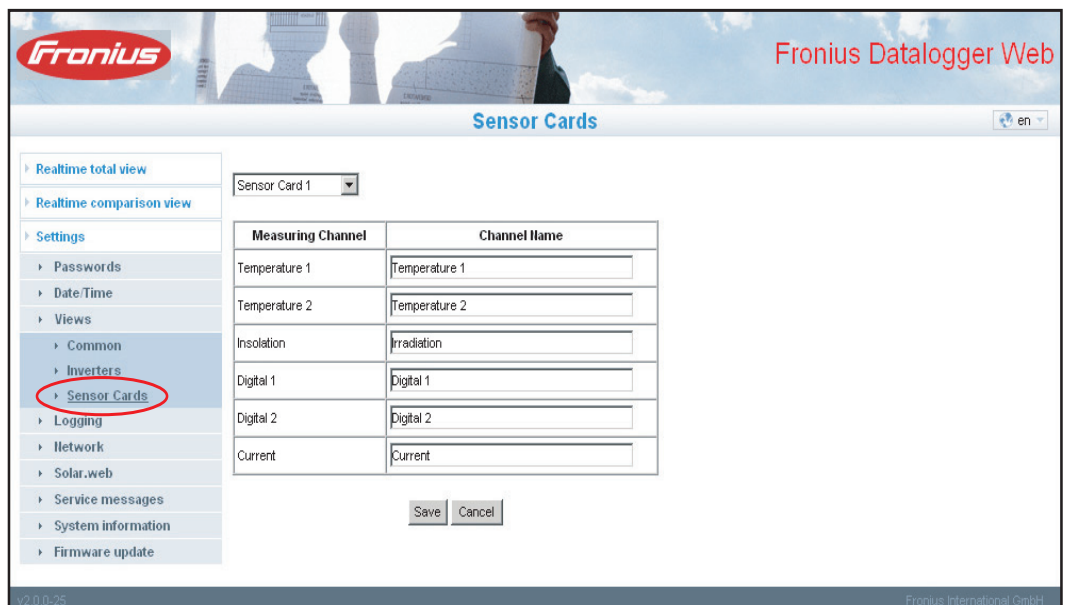

A specific channel name can be assigned to each sensor value of a Sensor Card in 'Sensor Cards' (e.g., wind speed).

- 1 Select Sensor Card for which the channel names are to be changed
- 2 Enter the desired channel names
- 3 Click on 'Save'

The settings for the Total view are applied.

Logging




General

The Datalogger saves the realtime data of all inverters as well as all sensor cards and Fronius sensor boxes integrated into the system at regular intervals. The save interval can be defined in a range of 5 - 30 minutes.

The data can be prepared, archived and viewed easily with a PC or laptop using the "Fronius Solar.access" software.

Logging

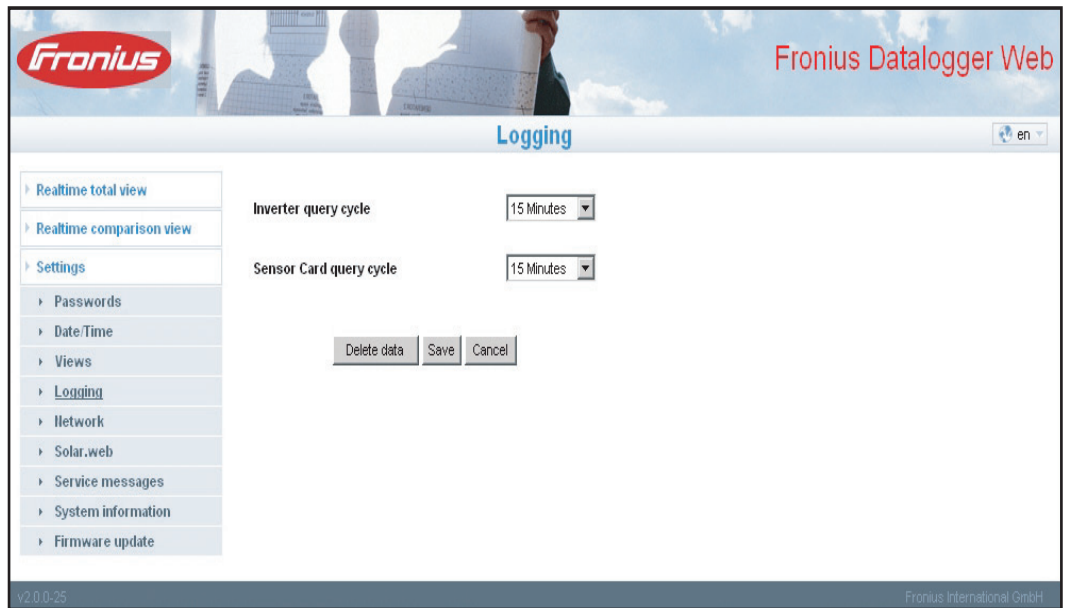

Memory capacity

The Datalogger has a memory capacity of up to 3 years for a PV system with one inverter and a save interval of 15 minutes.

However, the memory capacity is reduced accordingly depending on the number of inverters and/or Fronius sensor cards/boxes that are integrated into the system.

Calculating memory capacity

- 1 Determine logging points for inverters and Fronius sensor cards/boxes

$$\text{Logging points per day} = \frac{\text{Logging duration [min]}}{\text{Save interval [min]}}$$

Logging duration [min]

- For inverter: e.g., 14 hours = 840 minutes
- For Fronius Sensor Card/Fronius Sensor Box: 24 hours = 1440 minutes

2 Calculate the total logging points

Total logging points =
= (number of inverters x logging points per day) + (number of Fronius Sensor Cards/
Boxes x logging points per day)

3 Determine memory sectors per day

$$\text{Memory sectors per day} = \frac{\text{Total logging points}}{114}$$

4 Round to whole numbers

5 Determine memory capacity

$$\text{Memory capacity [days]} = \frac{2048}{\text{Memory sectors per day}}$$

Calculation example

2 inverters, logging duration = 14 hours (840 minutes)
1 Fronius Sensor Card, logging duration = 24 hours (1440 minutes)

Save interval = 15 minutes

1. Logging points per day:

$$\text{Inverter logging points} = \frac{840 \text{ min}}{15 \text{ min}} = 56$$

$$\text{Sensor Card logging points} = \frac{1440 \text{ min}}{15 \text{ min}} = 96$$

2. Total logging points:

$$\text{Total logging points} = (2 \times 56) + (1 \times 96) = 208$$

(2 x 56) ... 2 inverters, (1 x 96) ... 1 Sensor Card

3. Memory sectors per day:

$$\text{Memory sectors} = \frac{208}{114} = 1,825$$

4. Rounded:

$$1,825 \quad \Rightarrow \quad 2$$

5. Memory capacity [days]:

$$\text{Memory capacity} = \frac{2048}{2} = 1024 \text{ days} (= 2 \text{ years, } 9 \text{ months, } 18 \text{ days})$$

$$\text{Memory capacity [days]} = \frac{2048}{\text{Memory sectors per day}}$$



Overwriting data when memory is full

When the Datalogger memory is full, the oldest data will be overwritten by the newest data.

'Delete Data' button

All 'log data' saved to 'Datalogger Web' is deleted using the 'Delete Data' button.

IMPORTANT The power supply to 'Datalogger Web' must not be interrupted during the deletion process.

Network

General

The 'Network' selection option is used to configure 'Fronius Datalogger Web' for integration with an existing network.

For more information about network configuration for 'Fronius Datalogger Web,' please see the section 'Fronius Datalogger Web network configuration.'

Network




The screenshot shows the 'Fronius Datalogger Web' configuration interface. At the top, there is a header with the 'Fronius' logo on the left and 'Fronius Datalogger Web' on the right. Below the header, the word 'WLAN' is displayed in blue. A language dropdown menu is set to 'en'. On the left side, there is a navigation menu with the following items: 'Realtime total view', 'Realtime comparison view', 'Settings', 'Passwords', 'Date/Time', 'Views', 'Logging', 'Network', 'Internet connection', 'LAN', 'WLAN', 'WLAN management', 'Network diagnostics', 'Solar.web', 'Service messages', 'System information', and 'Firmware update'. The 'WLAN' item is selected and highlighted. The main configuration area on the right contains the following fields and options:

- Obtain address:** Radio buttons for 'static' (selected) and 'dynamic'.
- Host name:** An empty text input field.
- IP address:** A text input field containing '192.168.1.181'.
- Subnet mask:** A text input field containing '255.255.255.0'.
- Gateway:** A text input field containing '192.168.1.1'.
- DNS server:** A text input field containing '192.168.1.1'.

At the bottom of the configuration area, there are two buttons: 'Save' and 'Cancel'. The footer of the interface shows the version 'v2.0.0-25' on the left and 'Fronius International GmbH' on the right.

Network diagnostics

The 'Network diagnostics' selection option under 'Network' is used to enter 'ping' and 'trace route' commands.'

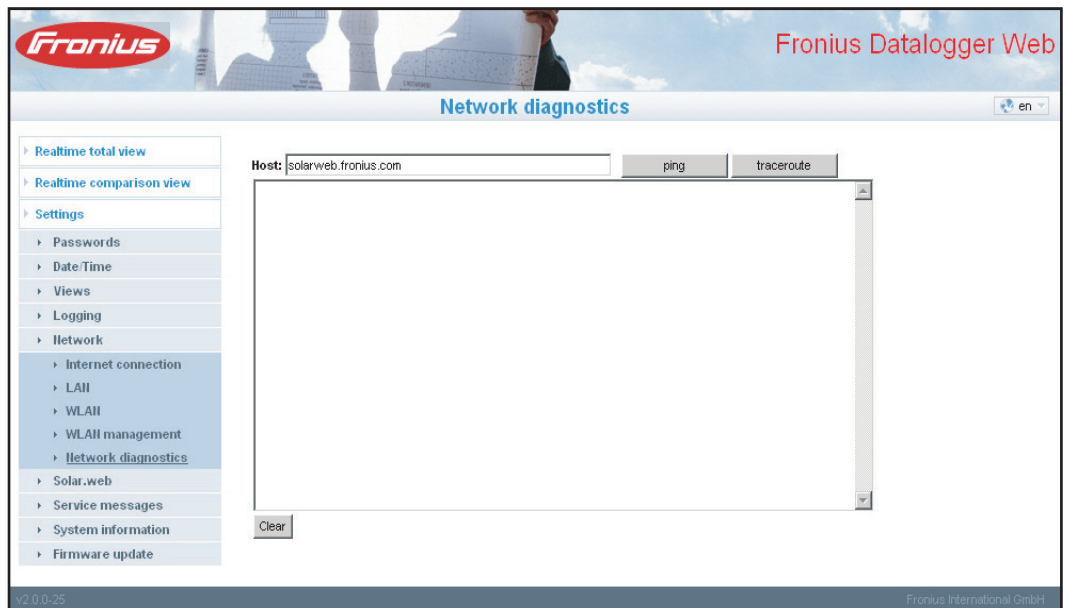

'Ping command'

The 'ping command' is used to determine whether or not a 'host' is available and how much time a data transfer will take.

Sending a 'Ping command':

- 1 Enter a host name in the 'Host' field
- 2 Click on the 'Ping' button
 - 'Ping command' is sent
 - The resulting data is displayed

'Trace route command'

A 'trace route command' is used to determine the intermediate stations the data takes to reach the 'host.'

Sending a 'trace route command':

- 1 Enter a host name in the 'Host' field
- 2 Click on the 'Trace route' button
 - 'Trace route command' is sent
 - The resulting data is displayed


Solar.web

General

The 'Solar.web' selection option is used to make a direct connection to 'Fronius Solar.web' from 'Fronius Datalogger Web.'

For more information about 'Fronius Solar.web,' please see the section 'Connecting to Fronius Datalogger Web via the Internet and Fronius Solar.web' or the 'Fronius Solar.web' on-line help.

Solar.web

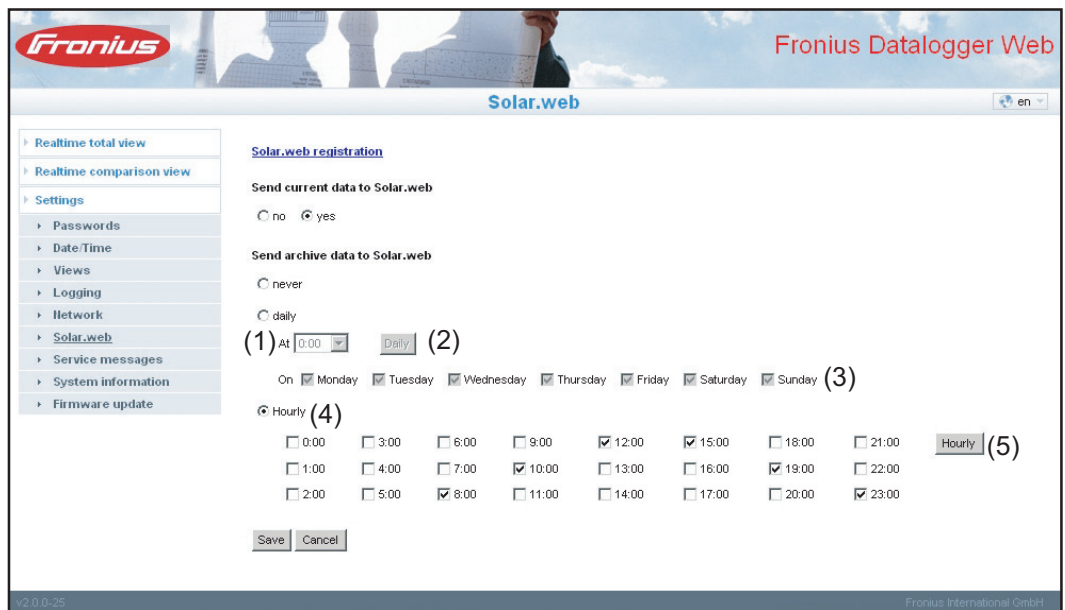

Daily data transmission to Solar.web

If the 'daily' selection option is activated, you can select:

- The time of day when data is transmitted (1)
- Whether data is transmitted each day (2)
- Whether data is transmitted only on specific days (3)

Hourly data transmission to Solar.web

If the 'hourly' selection option is activated, you can select:

- The times of day when data is transmitted (4)
- Whether data is transmitted each day on the hour every hour (5)

Service messages



General

Service messages as well as errors from inverters, the 'Fronius String Control,' etc. are sent to the Datalogger and saved. The 'Service messages' selection option is used to define how service messages are communicated. Communication can take place via:

- E-mail
- Fax
- SMS
- Relay contact
- Buzzer

Service messages can be analyzed further using 'Fronius Solar.web' or 'Fronius Solar.access.'

Service messages

- (1) PV system name
Included in the service message text
- IMPORTANT** The system name is used to identify the PV system that sent the message. Always enter a system name.
- (2) Selection field for the language in which the service message should be sent
 - (3) Message to e-mail recipient
Activate to send service messages to one or more e-mail addresses
 - (4) Field for up to a max. of 10 e-mail addresses
Separate e-mail addresses with ','
 - (5) Selection field to determine whether the service message will be sent immediately via e-mail or at a specific time

- (6) Selection field for the time when a service message will be sent via e-mail
- (7) 'Send test e-mail' button
- (8) Message to fax recipient
Activate to send service messages to a fax number
- (9) Field to enter country code
Example: +43 = country code for Austria
- (10) Field to enter the fax area code
- (11) Field to enter the fax number
- (12) Field for sending daily
- (13) Selection field for the time when a service message will be sent via fax
- (14) 'Send test fax' button
- (15) Message to SMS recipient
Activate to send service messages as an SMS to a telephone number
- (16) Field to enter country code
Example: +43 = country code for Austria
- (17) Field to enter area code
- (18) Field to enter the telephone number
- (19) Field for sending daily
- (20) Selection field for the time when a service message will be sent via SMS
- (21) 'Send test SMS' button

IMPORTANT Check your settings by sending a test message.

- (22) 'Save' button
- (23) 'Cancel' button
- (24) Field to enter country code
For a direct warning onsite.

Along with the acoustical signal of the buzzer, additional warnings can also be triggered via the relay output (e.g., signal horn, warning light).

The relay contact is an NCC (normally closed contact) and NOC (normally open contact) and is designed for the following max. voltage/current values:

42 V AC / 6 A

60 V DC / 400 mA

40 V DC / 1 A

30 V DC / 6 A

The buzzer and relay are activated or deactivated using the Alarm switch on the Datalogger. An alarm is acknowledged by switching it briefly to 'Alarm off.'

When 'Alarm on' is selected, the buzzer and relay are briefly activated as a test function.

- (25) 'Run test' button
Switches the relay and buzzer on for 1 second when the Alarm switch is set to 'Alarm on'
- (26) 'Reset alarm' button
Resets a triggered alarm, switches off the relay and buzzer



System information

General

The following system information for 'Fronius Datalogger Web' can be viewed in the 'System information' selection option:

- Datalogger ID
- PC board version
- Software version
- System time
- Uptime
- User agent
- Gateway
- DNS server
- LED states
- IP addresses
- Subnet masks
- MAC address

System information

Fronius Datalogger Web

System information

Datalogger ID	240.8245
Circuit board version	1.3A
Software version	2.0.0-25
System time	Apr 29 2010, 08:40:01 CEST
Uptime	0 d, 16 h, 45 min, 32 sec.
User agent	Mozilla/4.0 (compatible; MSIE 6.0; Windows NT 5.1; SV1; .NET CLR 1.1.4322; .NET CLR 2.0.50727)
Gateway	10.4.120.254 (eth0)
DNS server	10.1.1.60, 10.1.1.2
LED states	
LAN interface	
IP address	10.4.120.32
Subnet mask	255.255.255.0
MAC address	00:07:8E:0C:52:FF
WLAN interface	
IP address	192.168.1.181
Subnet mask	255.255.255.0
MAC address	00:0E:8E:19:86:92

Note: This device contains open source software.
For detailed information about the software being used and the requirements of the corresponding source code, please contact Fronius Tech Support.

(1) (2)

- (1) 'Datalogger restart' button
Used to restart 'Datalogger Web'
- (2) 'Reset to factory settings' button with the following selection options:

All settings except for the network
Used to reset 'Datalogger Web' to factory settings.
Network settings remain unchanged.

All settings
Used to reset 'Datalogger Web' and network settings to factory settings

IMPORTANT Using the 'Reset to factory settings' button does not affect the time and date settings. When 'Datalogger Web' is reset to factory settings, the time and date settings must be checked.

Firmware update




General

You can update the 'Fronius Datalogger Web' firmware from the 'Firmware update' selection option. A 'firmware update' can be carried out via LAN or web.

Automatic update search

When the 'Automatic update search' option (1) is activated, 'Datalogger Web' will automatically search once a day for updates. If new updates are available, they will be shown in the grey display bar (2).

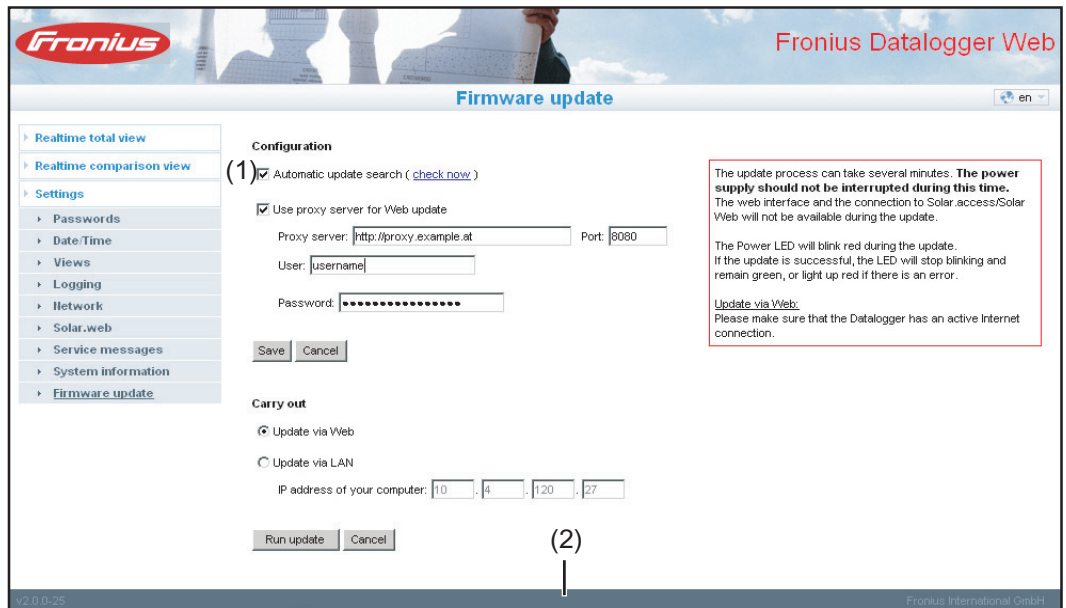

Manual update search

When the 'Automatic update search' function is deactivated, there will be no automatic update search.

- 1 To search manually for updates, use the 'Check now' button (3)

The screenshot shows the 'Firmware update' configuration page in the Fronius Datalogger Web interface. On the left, a navigation menu includes 'Realtime total view', 'Realtime comparison view', and 'Settings' (with sub-items: Passwords, Date/Time, Views, Logging, Network, Solar.web, Service messages, System information, and Firmware update). The main content area is divided into 'Configuration' and 'Carry out' sections. In the 'Configuration' section, the 'Automatic update search (check now) (3)' checkbox is unchecked. The 'Use proxy server for Web update' checkbox is checked. Below it, there are input fields for 'Proxy server' (http://proxy.example.at), 'Port' (8080), 'User' (username), and 'Password' (masked with dots). 'Save' and 'Cancel' buttons are present. In the 'Carry out' section, the 'Update via Web' radio button is selected, and the 'Update via LAN' radio button is unselected. Below, there are IP address input fields (10, 4, 120, 27) and 'Run update' and 'Cancel' buttons. A red-bordered warning box on the right contains the following text: 'The update process can take several minutes. The power supply should not be interrupted during this time. The web interface and the connection to Solar.access/Solar Web will not be available during the update. The Power LED will blink red during the update. If the update is successful, the LED will stop blinking and remain green, or light up red if there is an error. Update via Web: Please make sure that the Datalogger has an active Internet connection.'

Firmware update via web

The screenshot shows the 'Firmware update' configuration page in the Fronius Datalogger Web interface. The layout is identical to the previous screenshot, but the 'Automatic update search (check now) (3)' checkbox is now checked. The 'Update via Web' radio button remains selected. The warning box on the right is also present with the same text.

Procedure:

- 1 Use your Internet browser to open the 'Fronius Datalogger Web' website
- 2 Open Settings / Firmware update
- 3 Click on the 'Run update' button



NOTE! The update process can take several minutes. The power supply to the 'Fronius Datalogger Web' and the Internet connection should not be interrupted during this time. The web interface and the connection to 'Fronius Solar.access' or 'Fronius Solar.web' will not be available during the update process.

The update is complete when the 'Supply LED' lights up green.


If the connection to the server should fail:

- deactivate the firewall for the duration of the update
- retry the update

IMPORTANT If a proxy server is used to connect to the Internet:

- The 'Use proxy server for Web update' selection option must be activated
- The required data must be entered

Firmware update via LAN

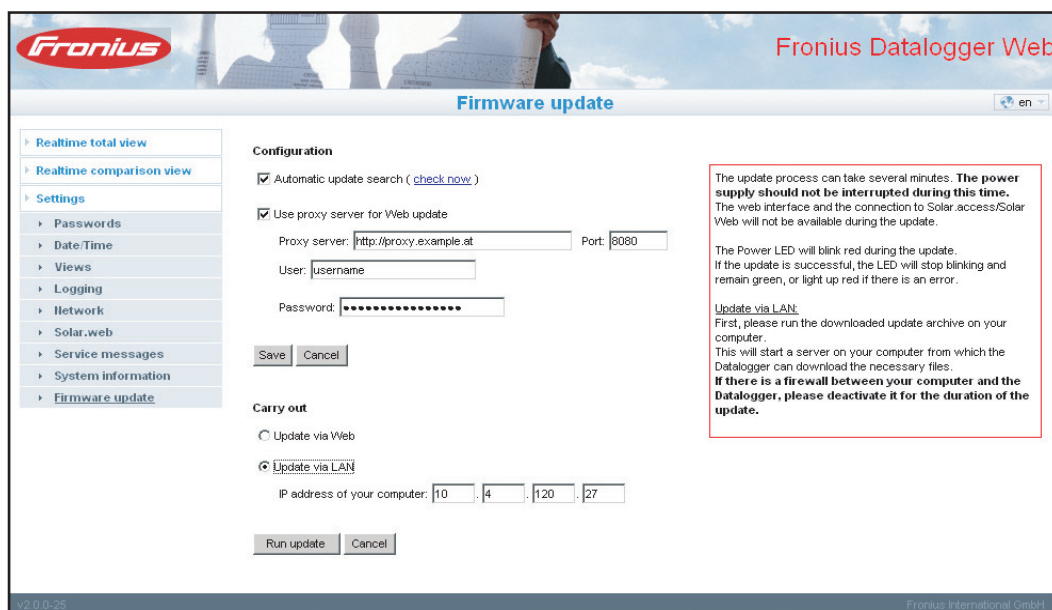

Procedure:

- 1 Download the current firmware from the Fronius homepage
- 2 Run the downloaded update file on the PC/laptop

This will start a web server from which 'Fronius Datalogger Web' will download the required files.

- 3 Use your Internet browser to open the 'Fronius Datalogger Web' website
- 4 Open Settings / Firmware update
- 5 Enter the IP address of the PC/laptop
- 6 Click on the 'Run update' button



NOTE! The update process can take several minutes. The power supply to the 'Fronius Datalogger Web' and the Internet connection should not be interrupted during this time. The web interface and the connection to 'Fronius Solar.access' or 'Fronius Solar.web' will not be available during the update process.

The update is complete when the 'Supply LED' lights up green.

If the connection to the server should fail:

- deactivate the firewall for the duration of the update
- retry the update

Technical Data



Technical data

Memory capacity	16 MB
Supply voltage	12 V DC
Power consumption	typ. 1.43 W
Degree of protection	IP 20
Dimensions	190 x 114 x 53 mm 4.69 x 4.49 x 2.09 in.
Relay output*	42 V AC / 6 A 60 V DC / 400 mA, 40 V DC / 1 A, 30 V DC / 6 A
Maximum cable cross section for the relay output	0.08 - 1.5 mm ² AWG 14 - 28 (USA/Canada)
Ethernet (LAN) (WLAN)	RJ 45, 100 Mbit via USB WLAN stick**
RS 485 (Solar Net)	RJ 45
External power supply connection	12 V DC, max. 1 A, Class 2
Cable cross section for external power supply connection	0.13 - 1.5 mm ² AWG 16 - 24 (USA/Canada)
Ambient temperature	0 - 50 °C 32 - 122 °F

* Values are only valid for pure ohmic load

** Available option



**EU-KONFORMITÄTSERKLÄRUNG 2010
EC-DECLARATION OF CONFORMITY 2010
DECLARATION DE CONFORMITE DE LA CE, 2010**

Wels-Thalheim, 2010-06-28

Die Firma

Manufacturer

La compagnie

FRONIUS INTERNATIONAL GMBH
Günter Fronius Straße 1, A-4600 Wels-Thalheim

erklärt in alleiniger Verantwortung,
dass folgendes Produkt:

Hereby certifies on it's sole
responsibility that the following
product:

se déclare seule responsable du fait
que le produit suivant:

Fronius Datalogger Web 2
Solar-Wechselrichter Zubehör

Fronius Datalogger Web 2
Photovoltaic inverter accessories

Fronius Datalogger Web 2
Onduleur solaire Accessoires

auf das sich diese Erklärung
bezieht, mit folgenden Richtlinien
bzw. Normen übereinstimmt:

which is explicitly referred to by this
Declaration meet the following
directives and standard(s):

qui est l'objet de la présente
déclaration correspondent aux
suivantes directives et normes:

Richtlinie 2004/108/EG
Elektromag. Verträglichkeit

Directive 2004/108/EC
Electromag. compatibility

Directive 2004/108/CE
Électromag. Compatibilité

Europäische Normen inklusive
zutreffende Änderungen
EN 55022:2006
EN 61000-6-2:2005

European Standards including
relevant amendments
EN 55022:2006
EN 61000-6-2:2005


Normes européennes avec
amendements correspondants
EN 55022:2006
EN 61000-6-2:2005

Die oben genannte Firma hält
Dokumentationen als Nachweis der
Erfüllung der Sicherheitsziele und
die wesentlichen Schutzanforder-
ungen zur Einsicht bereit.

Documentation evidencing
conformity with the requirements of
the Directives is kept available for
inspection at the above
Manufacture's.

En tant que preuve de la satisfaction
des demandes de sécurité la
documentation peut être consultée
chez la compagnie susmentionnée.

CE 2010

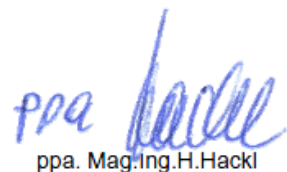
ppa. Mag. Ing. H. Hackl



Fronius Worldwide - www.fronius.com/addresses



Fronius International GmbH
4600 Wels-Thalheim, Günter-Fronius-Straße 1, Austria
E-Mail: pv@fronius.com
<http://www.fronius.com>



Fronius USA LLC Solar Electronics Division
10421 Citation Drive, Suite 1100, Brighton, MI 48116
E-Mail: pv-us@fronius.com
<http://www.fronius-usa.com>

Under <http://www.fronius.com/addresses> you will find all addresses of our sales branches and partner firms!